


2. REPAIR PARTS LIST

IDENTIFYING PARTS

Follow the disassembly in the numerical order given.

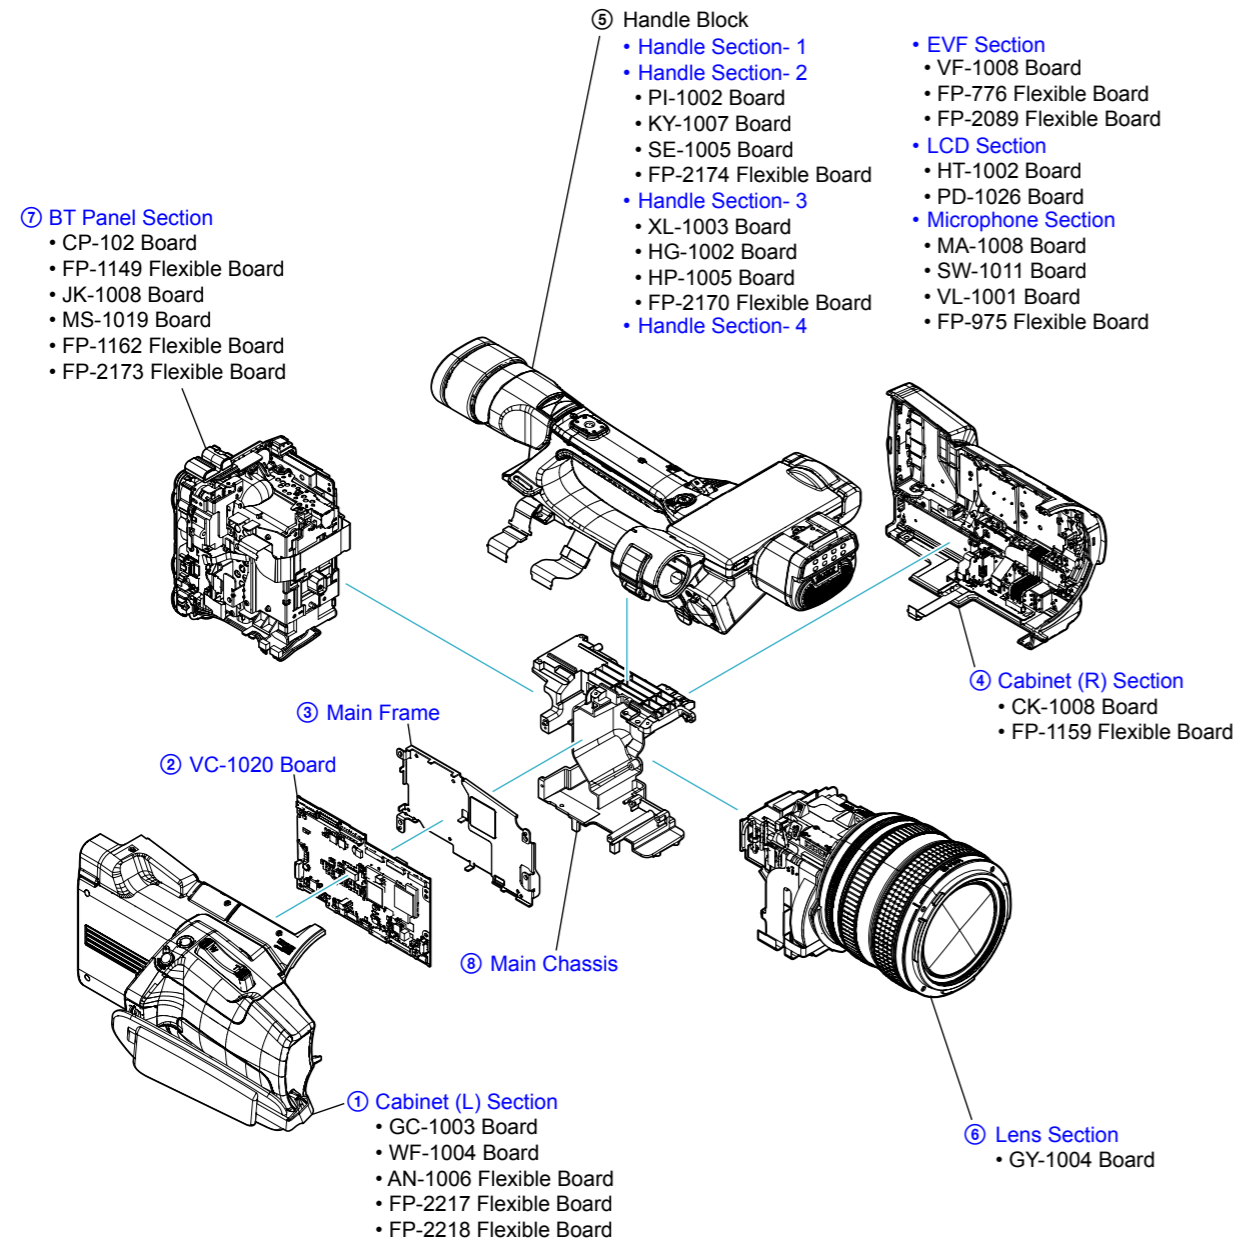

(ENGLISH)

NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- CAPACITORS:
uF: μ F
- COILS
uH: μ H
- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A..., uPA..., μ PA...,
uPB..., μ PB..., μ PC..., μ PC...,
uPD..., μ PD...

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- Color Indication of Appearance Parts
Example:
(SILVER): Cabinet's Color
(Silver): Parts Color

The components identified by mark $\hat{\Delta}$ contain confidential information. Strictly follow the instructions whenever the components are repaired and/or replaced. Destroy and discard the prescribed board and IC after they are replaced.

Les composants identifiés par le symbole $\hat{\Delta}$ contiennent des informations confidentielles. Suivez scrupuleusement les instructions chaque fois qu'un composant est remplacé et / ou réparé. Veuillez détruire et éliminer les circuits imprimés et / ou les circuits intégrés que vous avez remplacés.

标识有 $\hat{\Delta}$ 的元件包含机密信息。更换或维修元件时，请严格遵守指示。更换后的电路板和IC，应予以报废。

(JAPANESE)

【使用上の注意】

- ここに記載されている部品は、補修用部品であるため、回路図及びセットに付いている部品と異なる場合があります。
- -XX, -Xは標準化部品のため、セットに付いている部品と異なる場合があります。
- *印の部品は常備在庫していません。
- コンデンサの単位でuFは μ Fを示します。
- 抵抗の単位 Ω は省略してあります。
金 被：金属被膜抵抗。
サンキン：酸化金属被膜抵抗。
- インダクタの単位でuHは μ Hを示します。
- 半導体の名称でuA..., uPA..., uPB..., uPC..., uPD...等はそれぞれ μ A..., μ PA..., μ PB..., μ PC..., μ PD...を示します。

お願い
図面番号で部品を指定するときは基板名又はブロックを併せて指定してください。

\triangle 印の部品、または \triangle 印付の点線で囲まれた部品は、安全性を維持するために、重要な部品です。従って交換時は、必ず指定の部品を使用してください。


- 外装部品色表示
例：
(SILVER)：セットの色を表す。
(Silver)：部品の色を表す。

$\hat{\Delta}$ 印の部品には、秘密情報が含まれています。修理の際は、指示に従った対応を行ってください。交換後の対象基板及び対象ICは、破壊のうえ廃棄してください。

• Abbreviation

AEP : AEP Model
CH : Chinese Model
CND : Canadian Model
E : E Model
J : Japanese Model
US : US Model

View Position

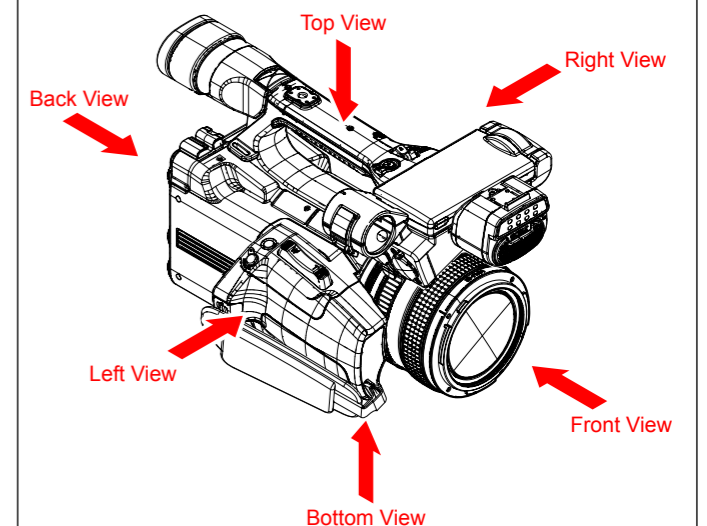

Link

ACCESSORIES


ASSEMBLY

OPERATION NOTES


Make sure that the conductive side of a flexible board does not have any stain or foreign materials.

Do not touch the conductive side of flexible boards with bare hands.

Plug in a flexible board straight, fully into the connector until it reaches the end inside. (Fig. 1, Fig. 2, Fig. 3)

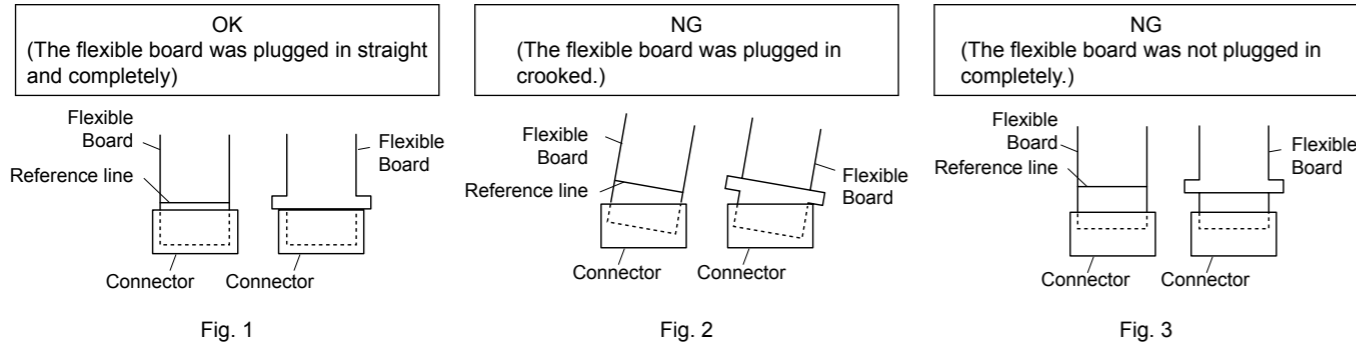


When opening the connector's holder in direction A, do not open it with excessive force.

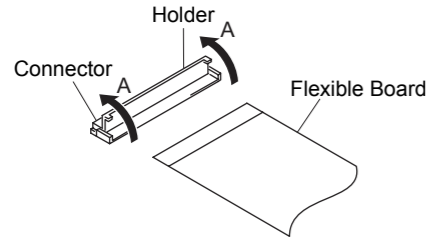


- Make sure that the flat cable and flexible board are not cracked or bent at the contact end.
- Do not apply excessive force to the gilded flexible board.

When closing the connector's holder, press it evenly while pushing a flexible board in direction B.

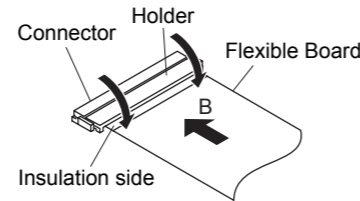

Cut and remove the part of gilt which comes off at the point. (Be careful or some pieces of gilt may be left inside)

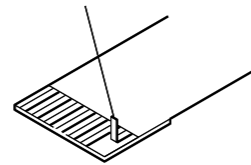


- The proper way to disconnect a connector is to grab the connector instead of the wires. If you pull on the wires, they might be broken.
- The proper way to connect a connector is to grab the connector instead of the wires. If you push on the wires, they might be broken.

作業時の注意


フレキシブル基板の導電面に汚れやごみがないことを確認してください。

フレキシブル基板の導電面を素手で触れないようにしてください。

フレキシブル基板は、コネクタの奥までまっすぐに差し込んでください。(図1, 図2, 図3参照)

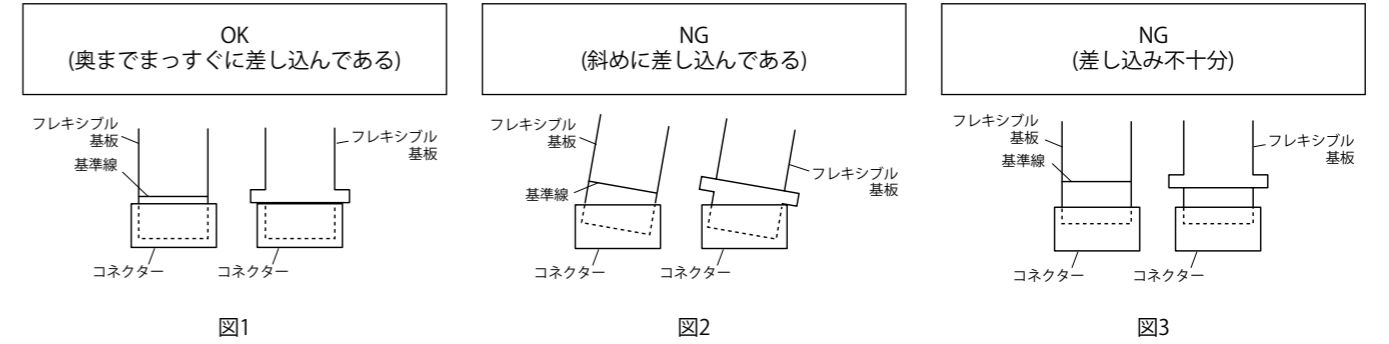


コネクタの開閉部を開ける際、A方向に開け過ぎないようにしてください。

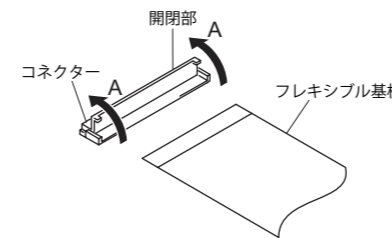


- フラットケーブルおよびフレキシブル基板の端子面に欠け、折れ等がないことを確認してください。
- 金メッキされているフレキシブル基板には、強い負担をかけないでください。

コネクタの開閉部を閉じる際、フレキシブル基板を矢印B方向に押しながら、開閉部を均一に押し込んでください。

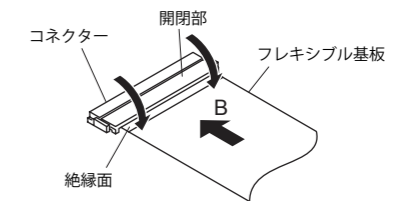

先端の剥がれたメッキ部はカットして除去してください。(メッキ破片がコネクタ内に残っている場合もあるので注意してください)

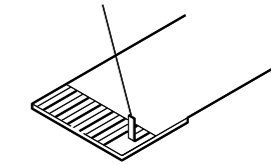


- コネクタを取り外す際に、線材部(極細)を持って引っ張ると断線する恐れがありますので、絶対に線材部(極細)を持って引っ張らないでください。
- 線材部(極細)を押さえながらコネクタを差し込むと、線材部(極細)が断線する恐れがありますので、絶対に線材部(極細)には負担をかけないでください。

2-1. EXPLODED VIEWS

2-1-1. OVERALL SECTION

ns: not supplied

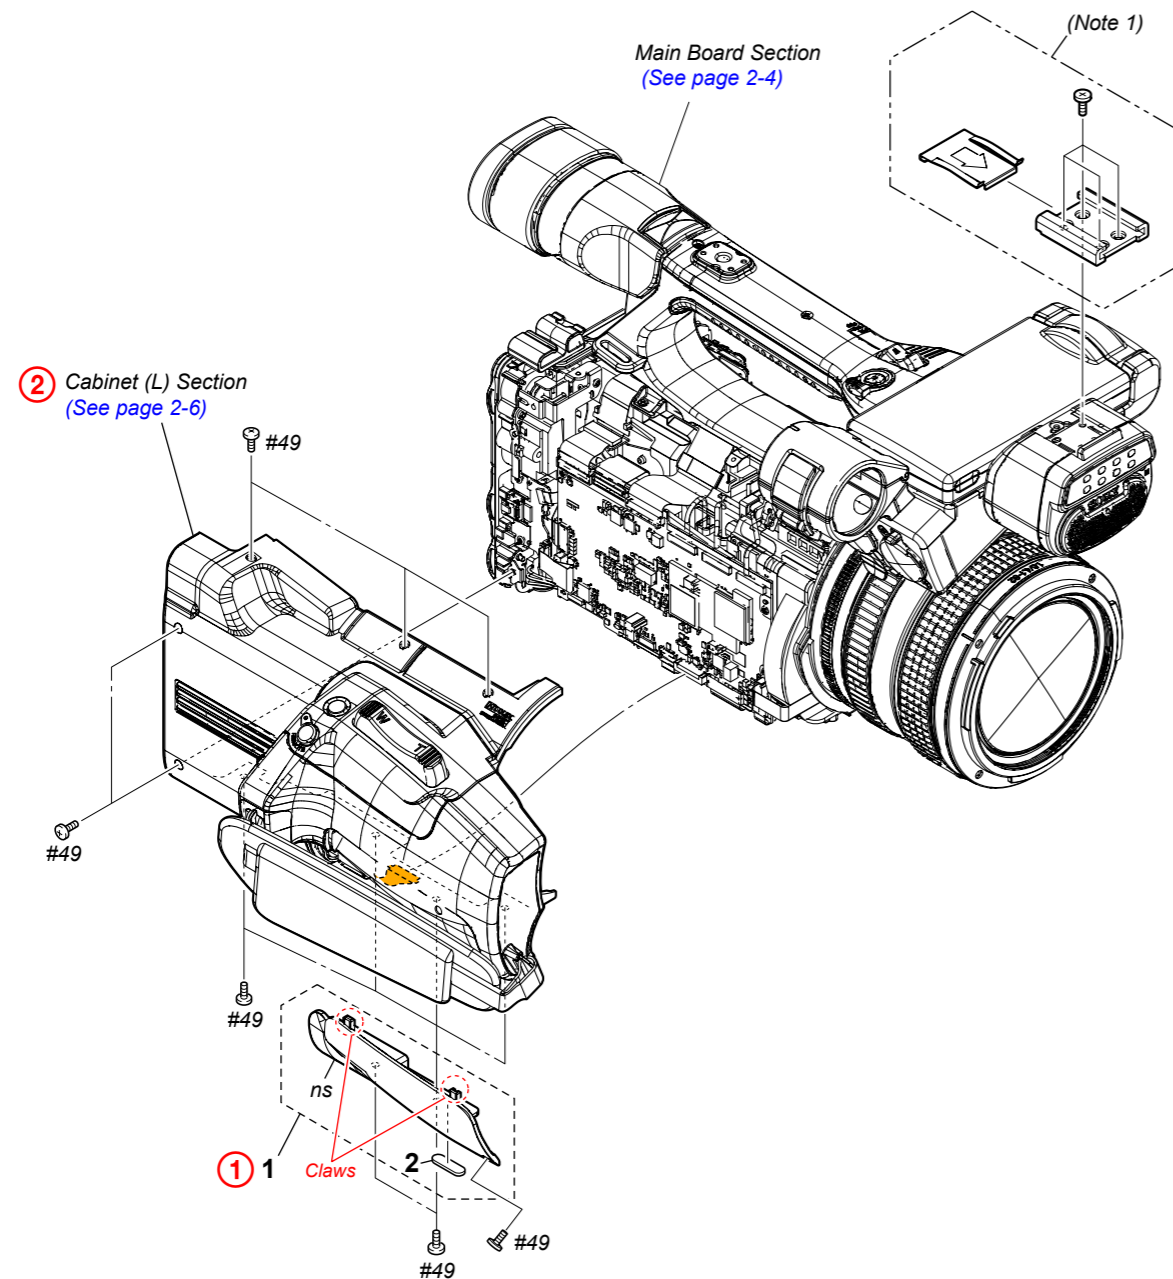

Ref. No.	Part No.	Description
1	X-2515-789-1	COVER ASSY, GRIP
2	2-178-805-01	FOOT, RUBBER


Ref. No.	Part No.	Description
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2
#273	2-342-356-21	SCREW (M2 (ECO, EG))

HXR-NX3


DISASSEMBLY

1. Remove in numerical order (① to ②) in the left figure.


① #49 X 3 → Grip Cover Assy → Disconnect the Flexible Board ①

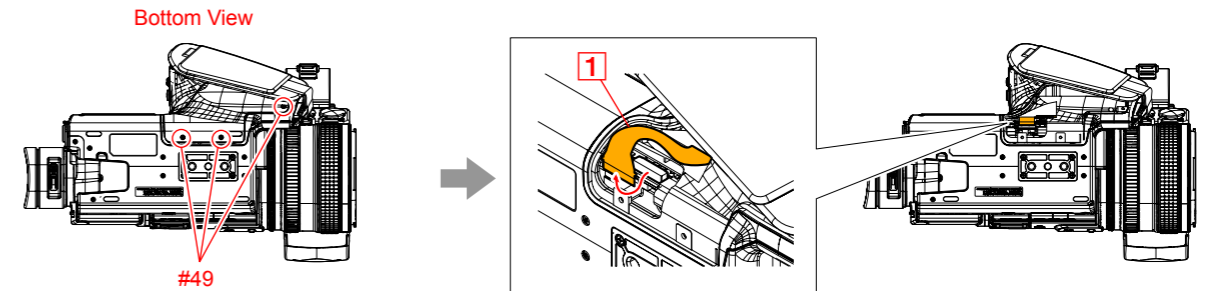

② #49 X 8

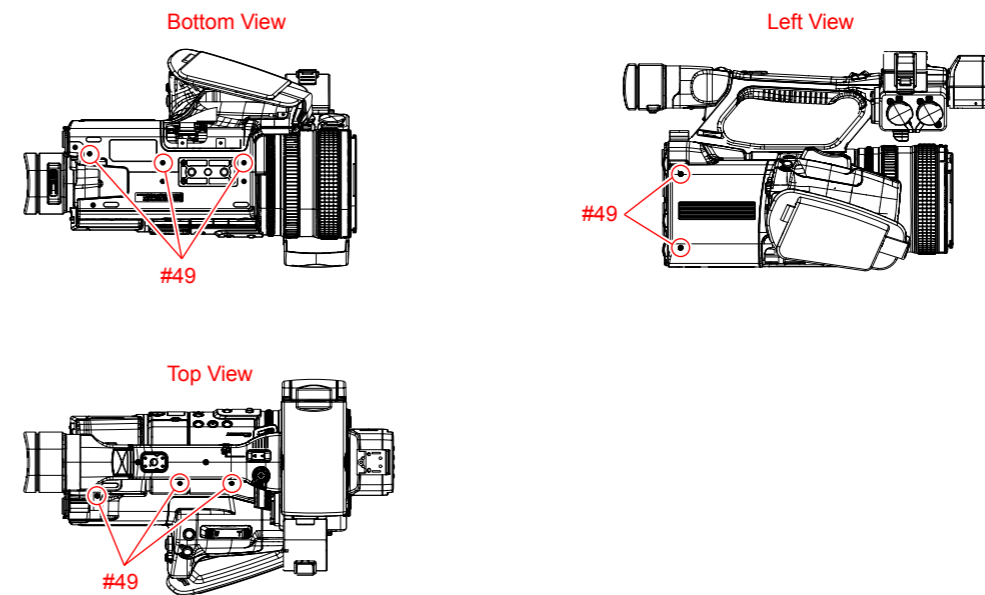

Screw

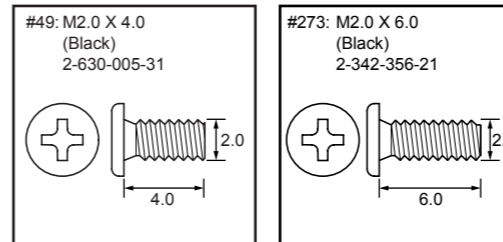


Note

Note 1: Refer to ACCESSORIES on page 2-17.

Note 1: 2-17ページ ACCESSORIES を参照してください。

2-1-2. MAIN BOARD SECTION

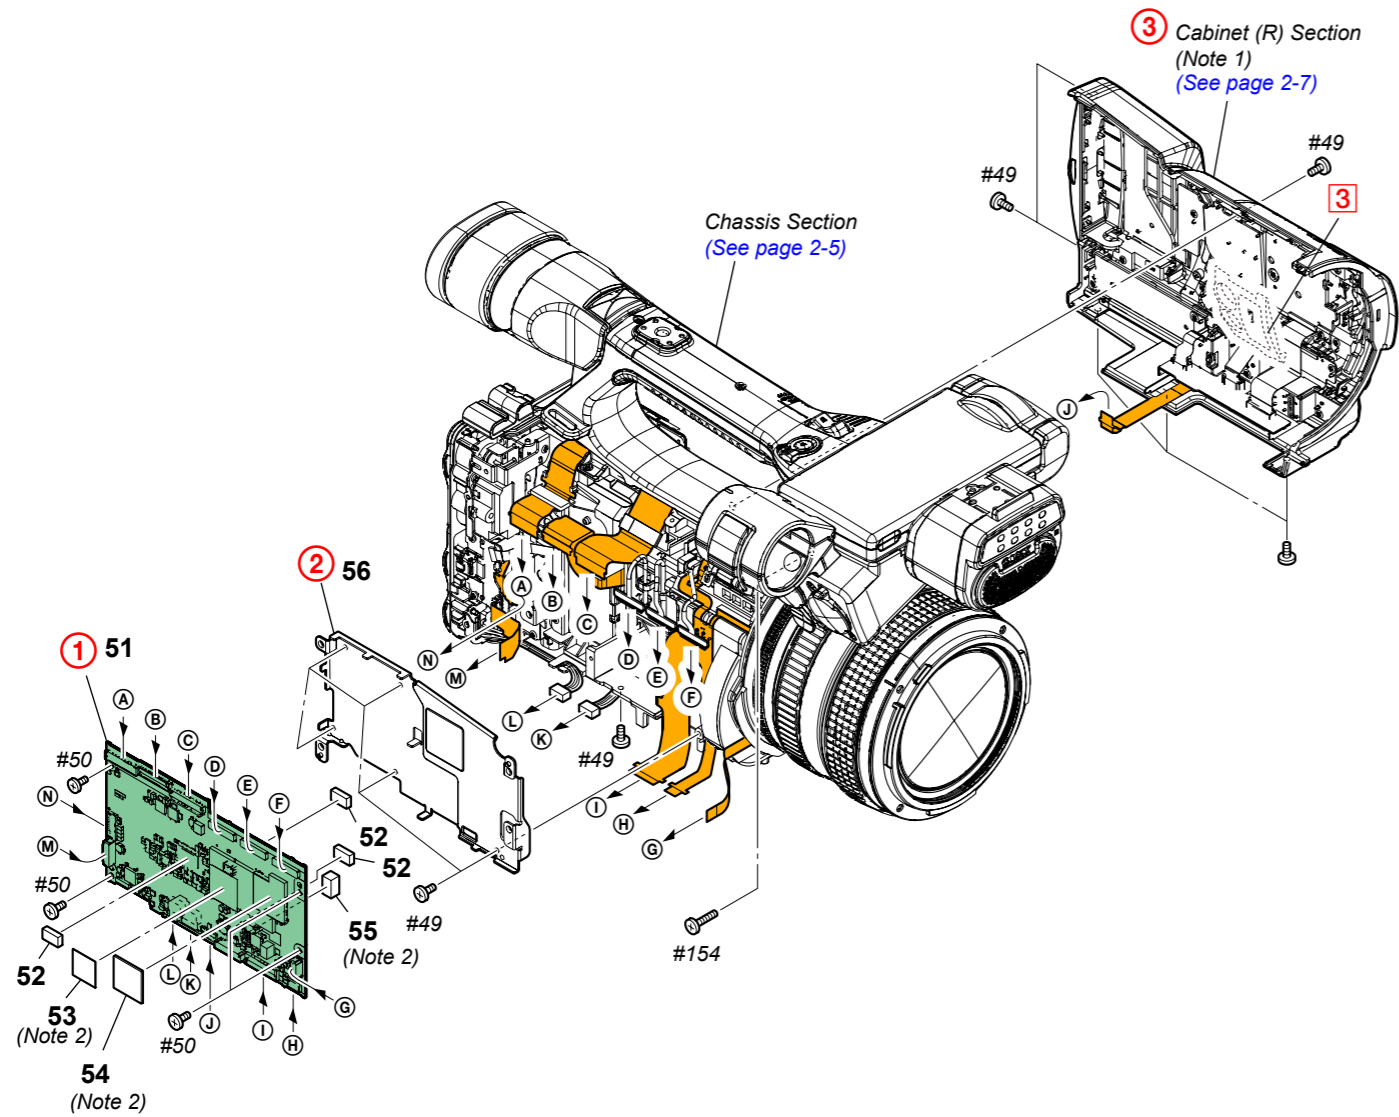

Ref. No.	Part No.	Description
51	A-1994-769-A	VC-1020 BOARD, COMPLETE (SERVICE)
* 52	4-170-751-01	SPACER (A), VC
53	4-527-208-01	SHEET, VC COUNTERMEASURE (Note 2)
54	4-488-870-01	SHEET, VC RADIATION (Note 2)
55	4-527-210-01	SPACER (B), VC (Note 2)


Ref. No.	Part No.	Description
* 56	4-165-252-01	FRAME, MAIN
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2
#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2
#154	7-627-556-97	SCREW, PRECISION +P2.6X8 TYPE 1

HXR-NX3


DISASSEMBLY

1. Remove in numerical order (1) to (3) in the left figure.


① #50 X 4

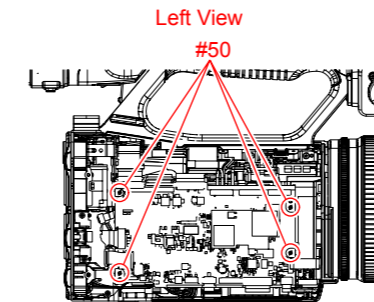


② #49 X 6

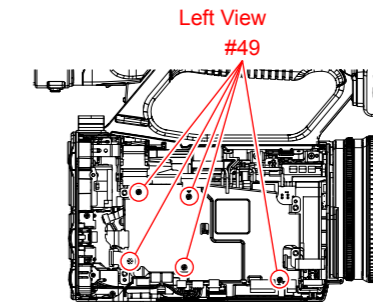


Bottom View

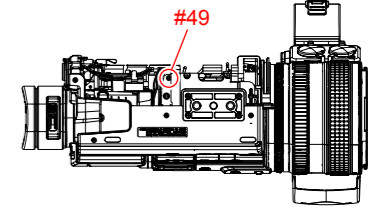


③ Open Lid AL (3) → #49 X 6 → #154 X 1

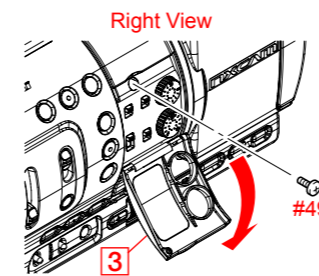


Bottom View

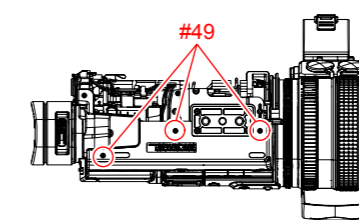

Back View

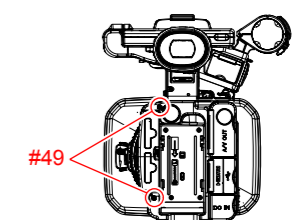


Left View

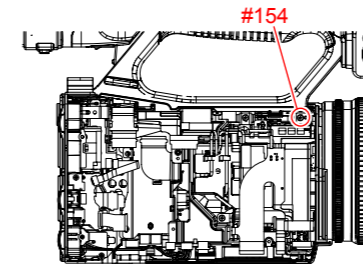


Screw


#49: M2.0 X 4.0
(Black)
2-630-005-31

 

#50: M2.0 X 3.0
(Red)
2-891-494-11

 

#154: M2.6 X 8.0
(Silver)
7-627-556-97

 

Note


Note 1: Refer to "Assembly-6: On installation of the Cabinet (R) section, adjust the position of the ND filter switch" when installing.

Note 1: 組立時は"Assembly-6: On installation of the Cabinet (R) section, adjust the position of the ND filter switch"を参照してください。

Note 2: Do not reuse these Parts because their adhesive force decreases when they are removed once.

Note 2: これらの部品は一度剥がすと粘着力が弱くなるため、再利用はしないでください。

2-1-3. CHASSIS SECTION

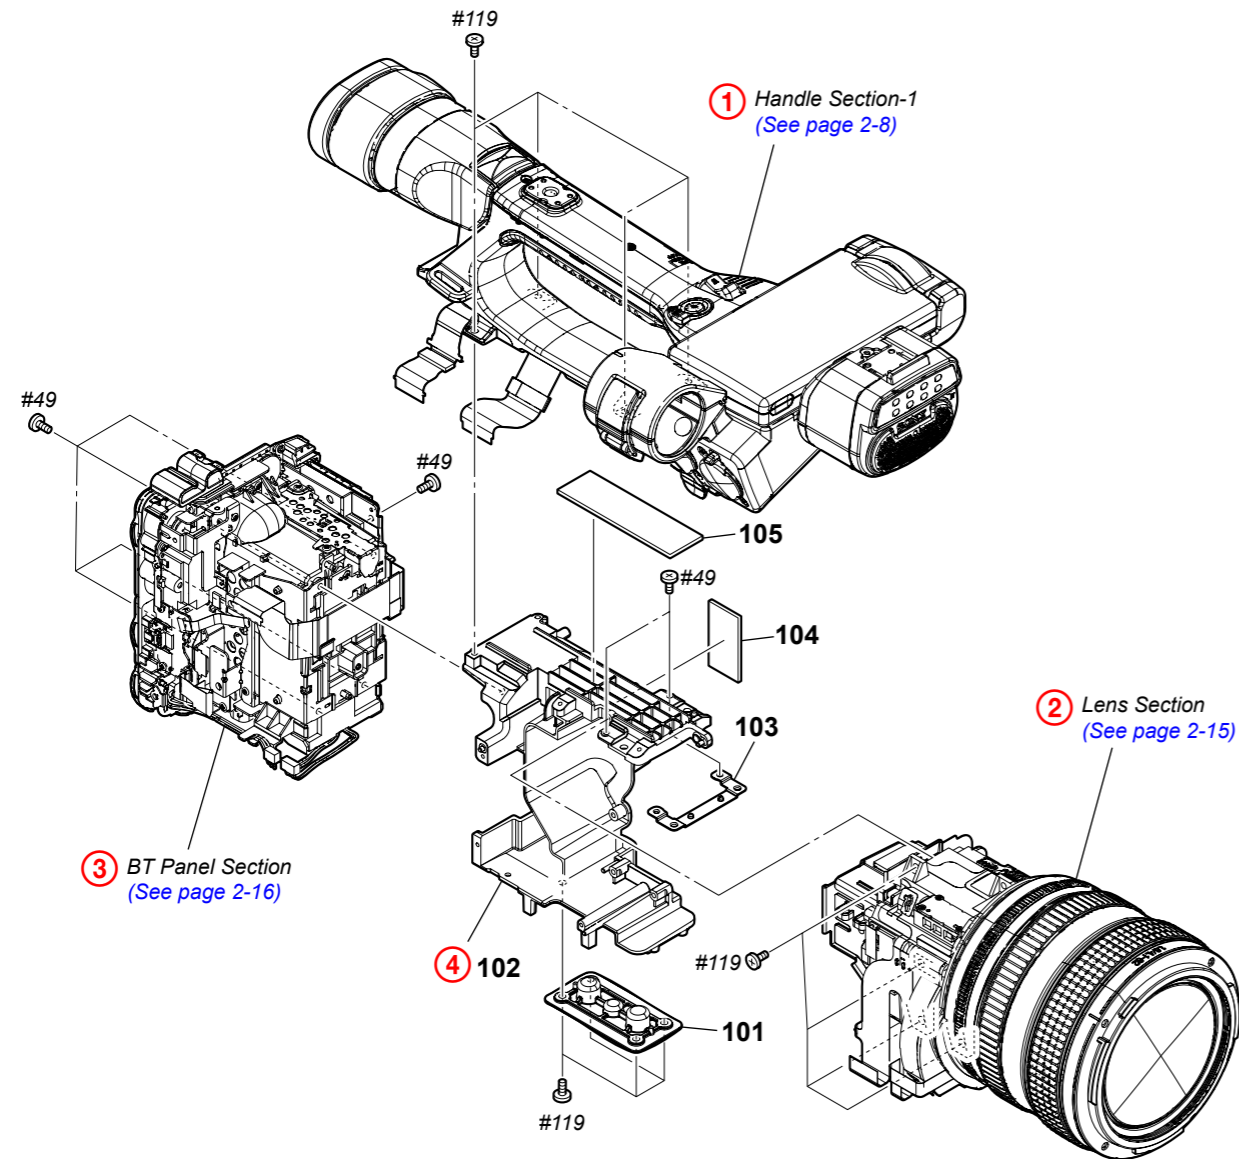

Ref. No.	Part No.	Description
101	4-119-234-11	WASHER, TRIPOD
* 102	4-165-251-01	CHASSIS, MAIN
103	4-119-237-01	PLATE (F), MC FIXED
* 104	4-165-225-01	SHEET (3218T1), RADIATION
105	4-165-224-01	SHEET (6018T1), RADIATION

Ref. No.	Part No.	Description
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2
#119	7-627-556-58	SCREW +P 2.6X5


HXR-NX3

DISASSEMBLY

1. Remove in numerical order (1) to (4) in the left figure.


① #119 X 4

Top View

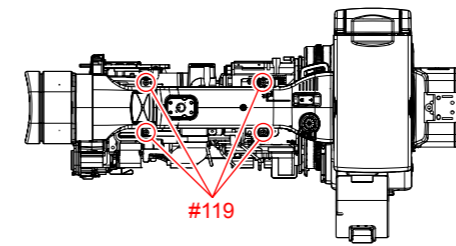


② #119 X 4

Left View

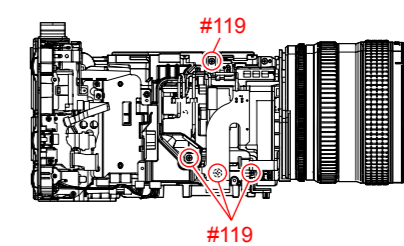


③ #49 X 5



Back View

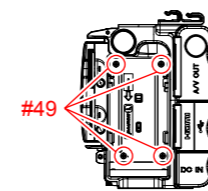


Right View

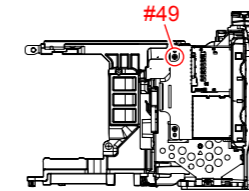


Screw

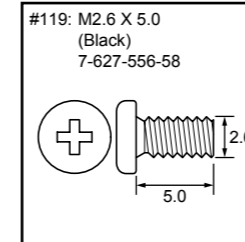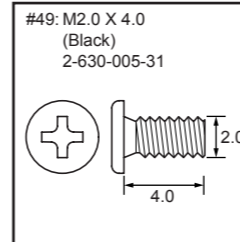


2-1-4. CABINET (L) SECTION

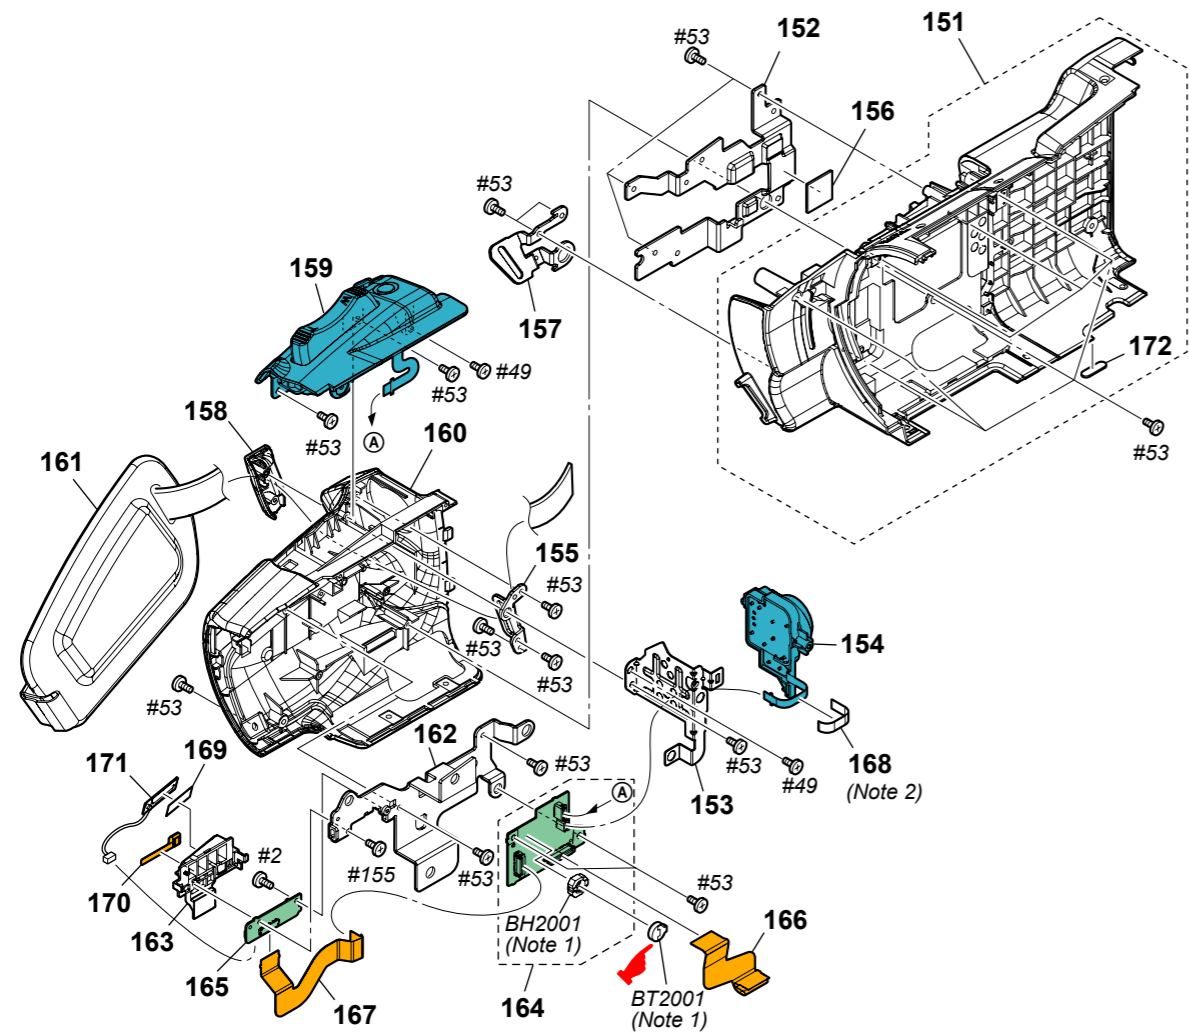

 : BT2001 (LITHIUM STORAGE BATTERY)
Board on the mount position.
(See page 6-45)

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
151	X-2588-889-1	CABINET (L (93600)) ASSY	166	1-889-609-11	FP-2217 FLEXIBLE BOARD
* 152	4-488-859-01	HEAT SINK, L	167	1-889-610-11	FP-2218 FLEXIBLE BOARD
* 153	4-165-326-01	FRAME, PS	168	4-488-862-01	SHEET, PS PROTECTION (Note 2)
154	1-487-447-11	SWITCH BLOCK, CONTROL (PS94000)	169	4-489-010-01	SHEET (ANT), ADHESIVE
* 155	4-165-331-01	BRACKET (REAR), GRIP BELT	170	1-889-592-11	AN-1006 FLEXIBLE BOARD
156	4-527-209-01	SHEET (L), RADIATION	171	A-2040-499-A	NFC BLOCK ASSY
* 157	4-165-327-01	BRACKET (FRONT), GRIP BELT	172	2-178-805-01	FOOT, RUBBER
* 158	4-165-330-01	HOLDER, GRIP BELT	△BT2001	1-756-134-15	BATTERY, LITHIUM (SECONDARY) (Note 1)
159	1-487-448-41	SWITCH BLOCK, CONTROL (PZ94000)	△BH2001	1-251-928-21	SOCKET, BATTERY (Note 1)
160	X-2588-890-1	CABINET G (93600) ASSY	#2	2-635-562-31	SCREW (M1.7)
161	2-178-804-01	BELT, GRIP	#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2
* 162	4-488-860-01	HEAT SINK, G	#53	3-080-206-21	SCREW, TAPPING, P2
* 163	4-488-861-01	HOLDER, WF	#155	3-080-204-31	SCREW, TAPPING, P2
164	A-1994-366-A	GC-1003 BOARD, COMPLETE			
165	A-1998-093-A	WF-1004 BOARD, COMPLETE			

Screw

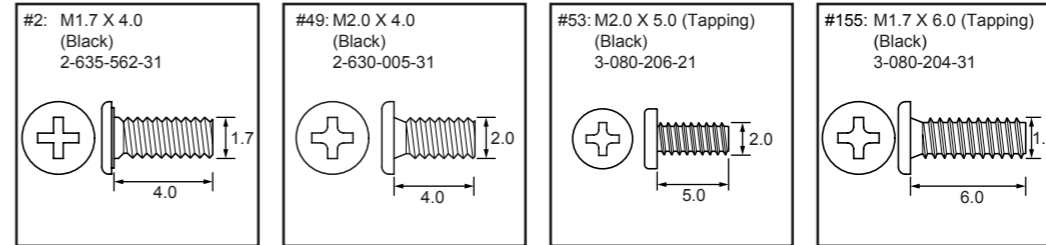

Note

Note 1: Replace the battery holder (BH2001) together when replacing the lithium storage battery (BT2001) on the GC-1003 board. (The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium storage battery next.


Note 2: Do not reuse these Parts because their adhesive force decreases when they are removed once.

Note 1: GC-1003基板のリチウム蓄電池(BT2001)を交換する場合はバッテリーホルダ(BH2001)も同時に新品に交換して下さい。(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム蓄電池を装着して下さい。

Note 2: これらの部品は一度剥がすと粘着力が弱くなるため、再利用はしないでください。

2-1-5. CABINET (R) SECTION

ns: not supplied

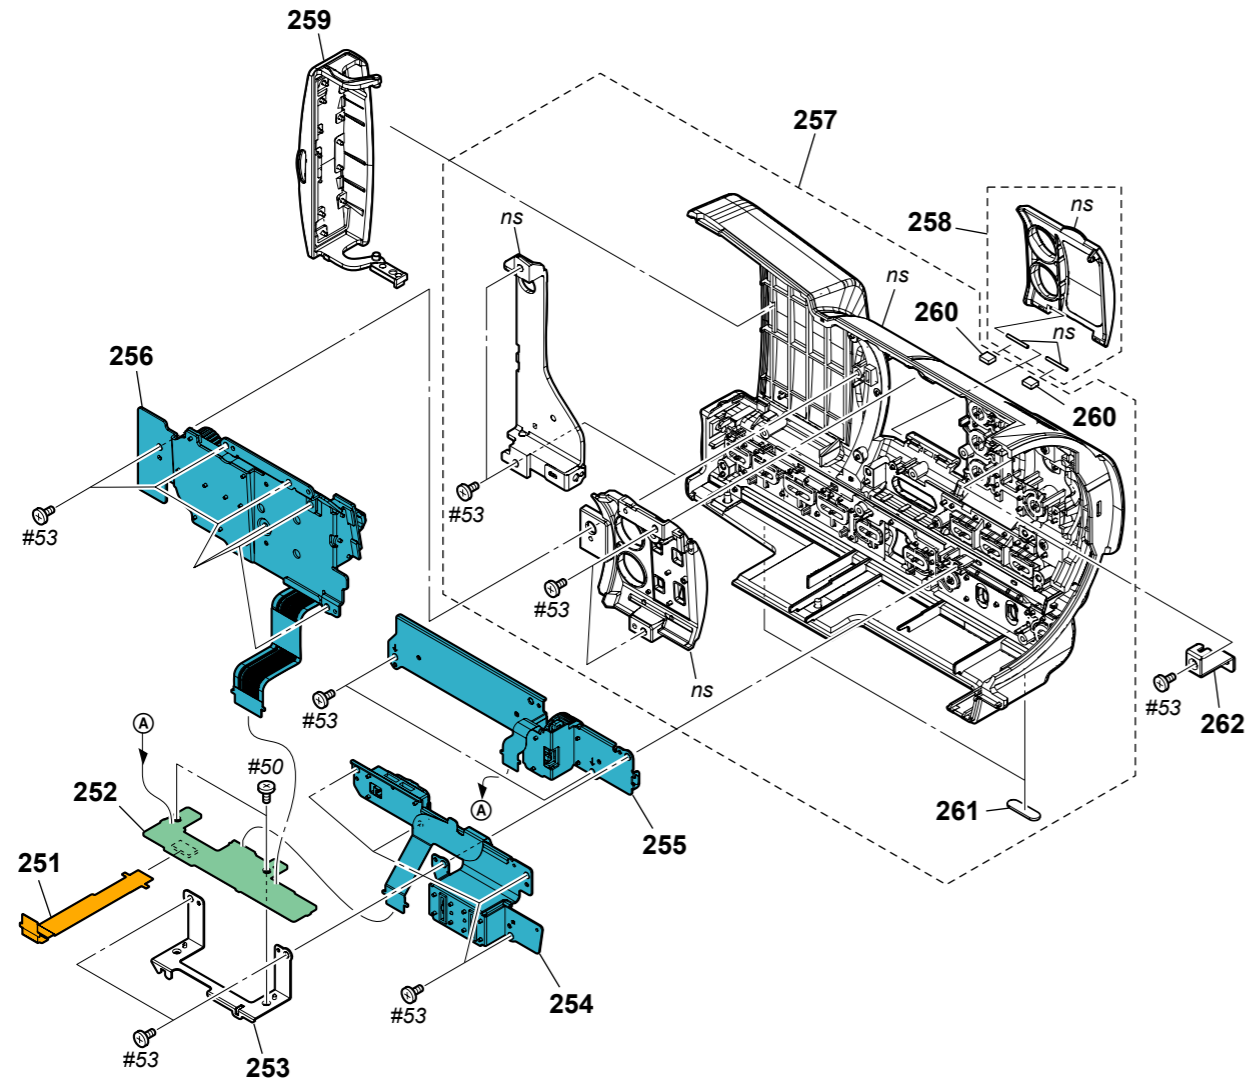


Ref. No.	Part No.	Description
251	1-879-858-11	FP-1159 FLEXIBLE BOARD
252	A-1994-367-A	CK-1008 BOARD, COMPLETE
* 253	4-165-333-01	SHEET METAL, CK
254	1-487-451-11	SWITCH BLOCK, CONTROL (CF94000)
255	1-487-449-11	SWITCH BLOCK, CONTROL(KP94000)
256	1-487-450-11	SWITCH BLOCK, CONTROL (AU94000)
257	X-2588-888-2	CABINET (R (93600)) ASSY
258	X-2589-143-1	LID SUB ASSY (93600), AL

Ref. No.	Part No.	Description
259	X-2589-142-1	LID SUB ASSY (93600), MS
* 260	4-165-325-01	SHEET, RUBBER
261	4-165-229-01	FOOT, RUBBER
* 262	4-119-383-01	PLATE, CABINET (R) FIXED
#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2
#53	3-080-206-21	SCREW, TAPPING, P2


HXR-NX3

Screw

#50: M2.0 X 3.0
(Red)
2-891-494-11

 


#53: M2.0 X 5.0 (Tapping)
(Black)
3-080-206-21

 


2-1-6. HANDLE SECTION-1

ns: not supplied

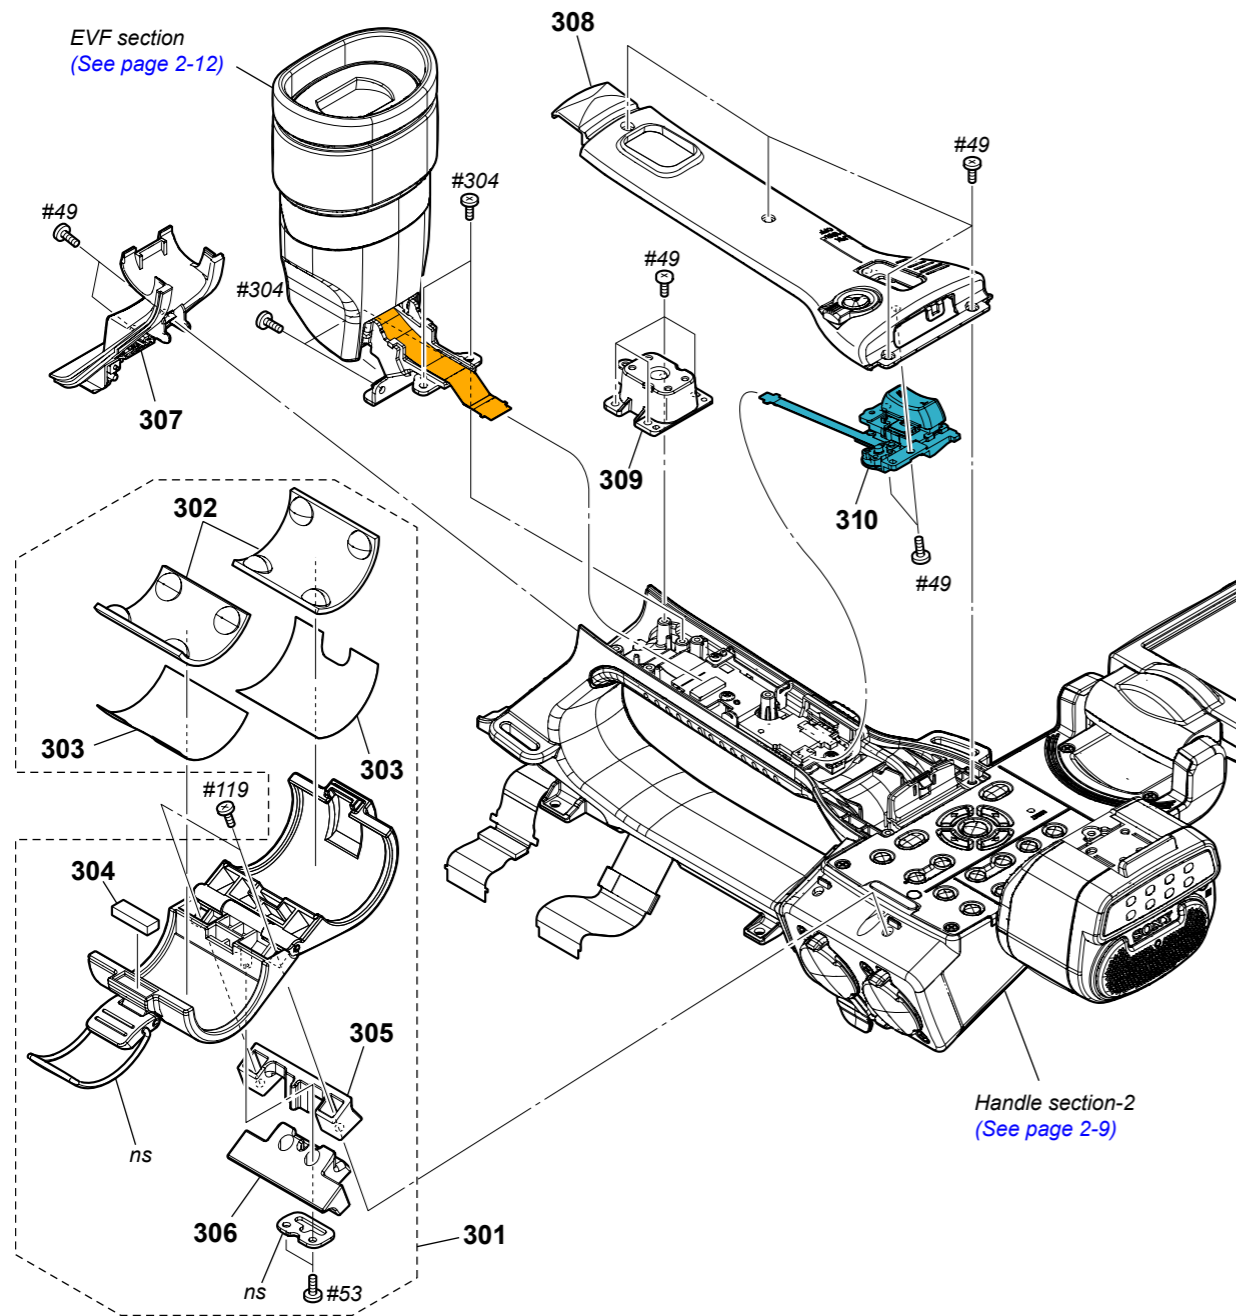


Screw

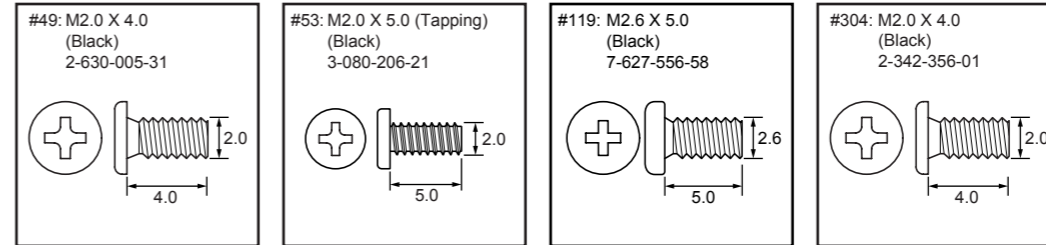

Ref. No.	Part No.	Description
301	X-2342-570-1	HOLDER (93000) ASSY,MICROPHONE
302	3-284-080-01	RUBBER, MICROPHONE
303	3-284-081-11	SHEET, RUBBER ADHESIVE
304	3-284-621-11	CUSHION, MICROPHONE HOLDER
305	3-284-075-02	COVER, MICROPHONE HOLDER RUBBER
306	4-119-861-01	RUBBER (93000), HOLDER
307	X-2588-893-1	COVER (93600) ASSY, (REAR)

Ref. No.	Part No.	Description
308	X-2588-892-1	CABINET (93600) ASSY, (UPPER)
309	3-288-538-11	SHOE, REAR (COLD)
310	1-480-298-11	SWITCH BLOCK, CONTROL (GZ92000)
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2
#53	3-080-206-21	SCREW, TAPPING, P2
#119	7-627-556-58	SCREW +P 2.6X5
#304	2-342-356-01	SCREW (M2 (ECO, EG))


2-1-7. HANDLE SECTION-2

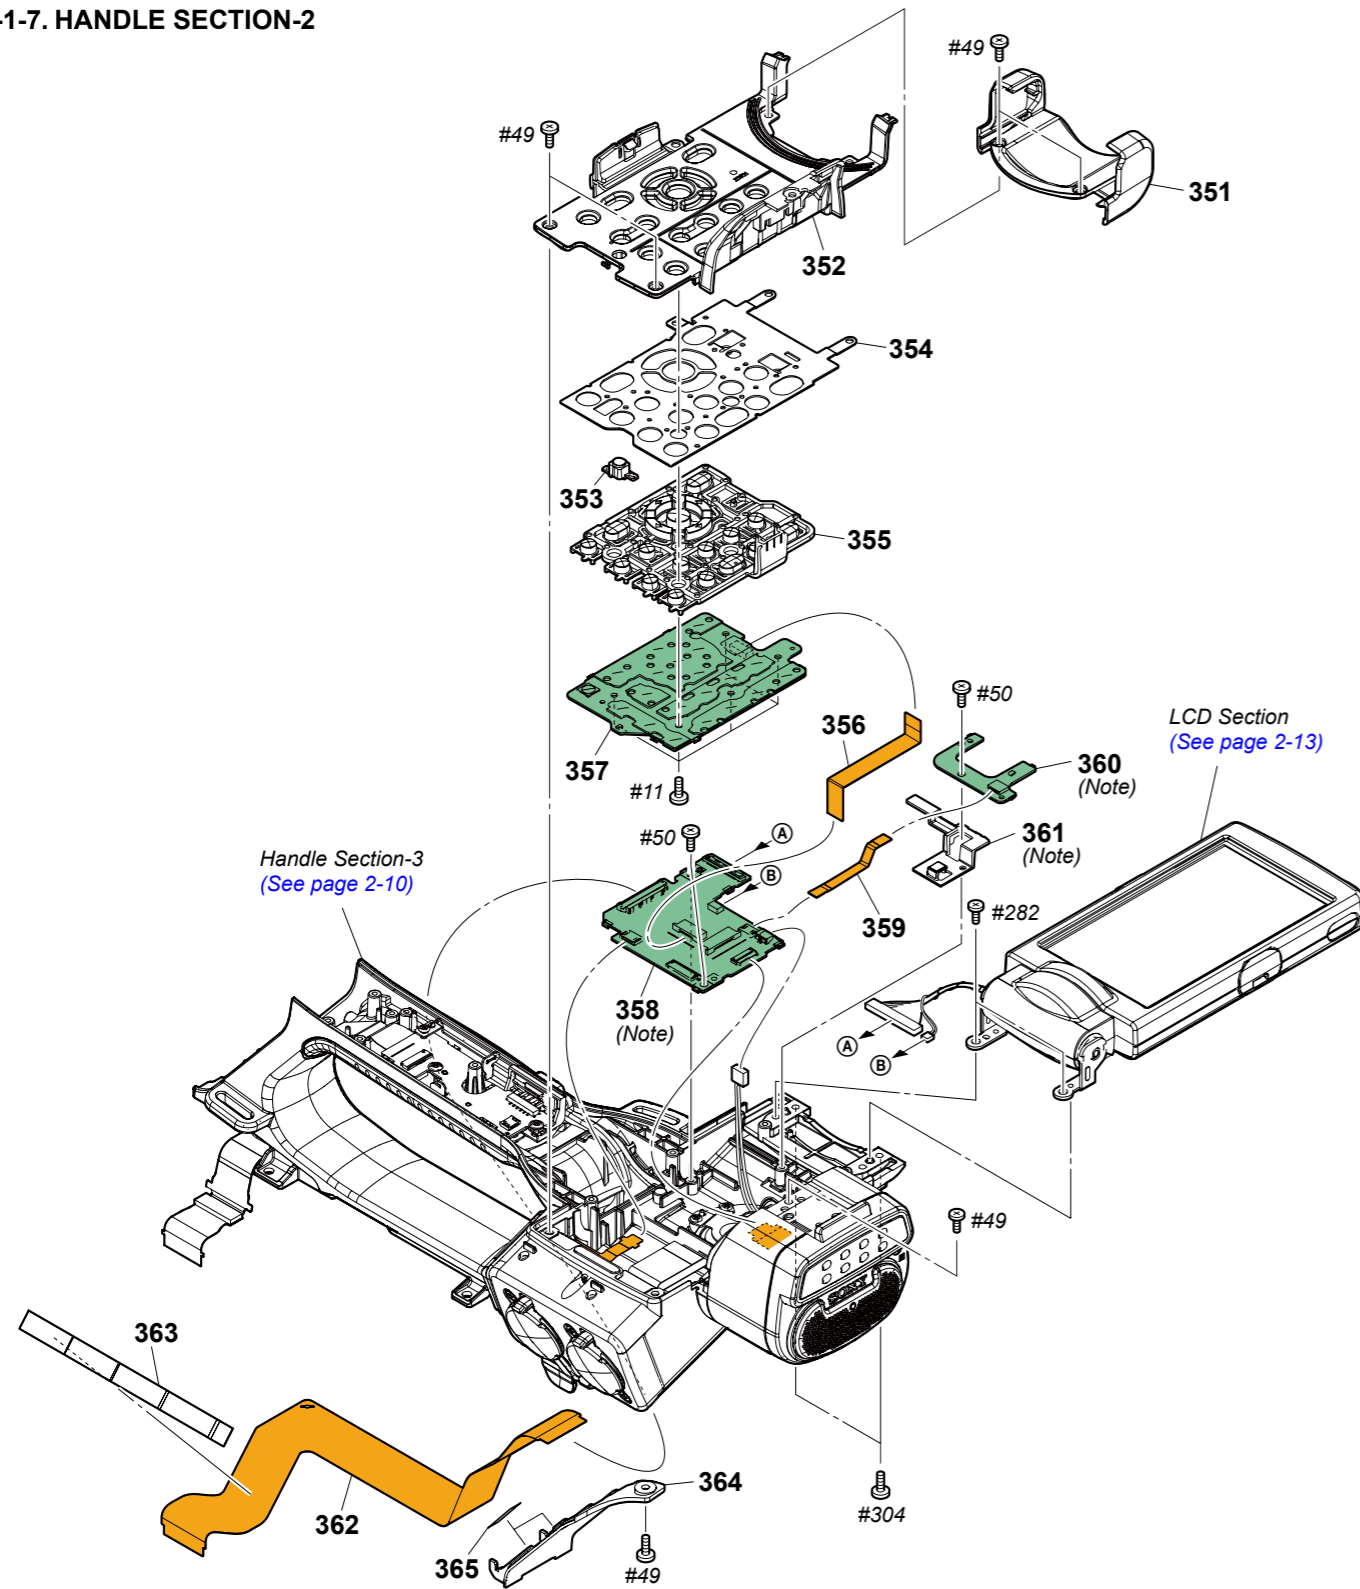

Ref. No.	Part No.	Description
351	4-460-888-02	CABINET (SIDE), HANDLE
352	X-2589-026-1	PANEL (93600) ASSY, CONTROL
353	4-488-869-01	LIGHT, SENSOR GUIDE
354	X-2589-027-1	PLATE ASSY, PANEL GROUND
355	4-165-373-03	BUTTON, CONTROL
356	1-846-791-11	FLEXIBLE FLAT CABLE (FFC-1046)
357	A-1994-394-A	KY-1007 BOARD, COMPLETE
358	A-1994-376-A	PI-1002 BOARD, COMPLETE (Note)
359	1-836-006-11	FLEXIBLE FLAT CABLE (FFC-172)
360	A-1994-375-A	SE-1005 BOARD, COMPLETE (Note)

Ref. No.	Part No.	Description
361	4-460-887-01	CLAMP, HARNESS (Note)
362	1-889-008-11	FP-2174 FLEXIBLE BOARD
363	4-169-934-01	SHEET (FP1157), COUNTERMEASURE
364	4-165-281-01	CABINET, HANDLE (FRONT)
* 365	4-174-174-01	CUSHION, HANDLE (FRONT) CABINET
#11	3-078-890-11	SCREW, TAPPING
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2
#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2
#282	3-694-181-02	TYPE1, AROCK PRECISION +P2.6X5
#304	2-342-356-01	SCREW (M2 (ECO, EG))

Screw

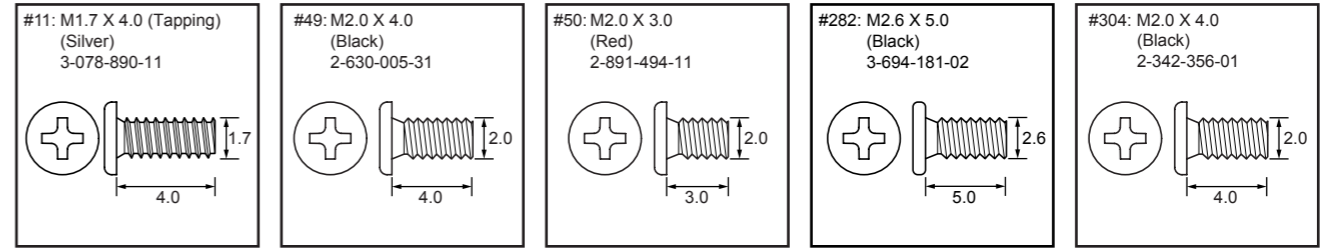


Note

Note: Refer to "Assembly-4: How to arrange Harnesses and Flexible Board" when installing.

Note: 組立時は"Assembly-4: How to arrange Harnesses and Flexible Board"を参照してください。


2-1-8. HANDLE SECTION-3

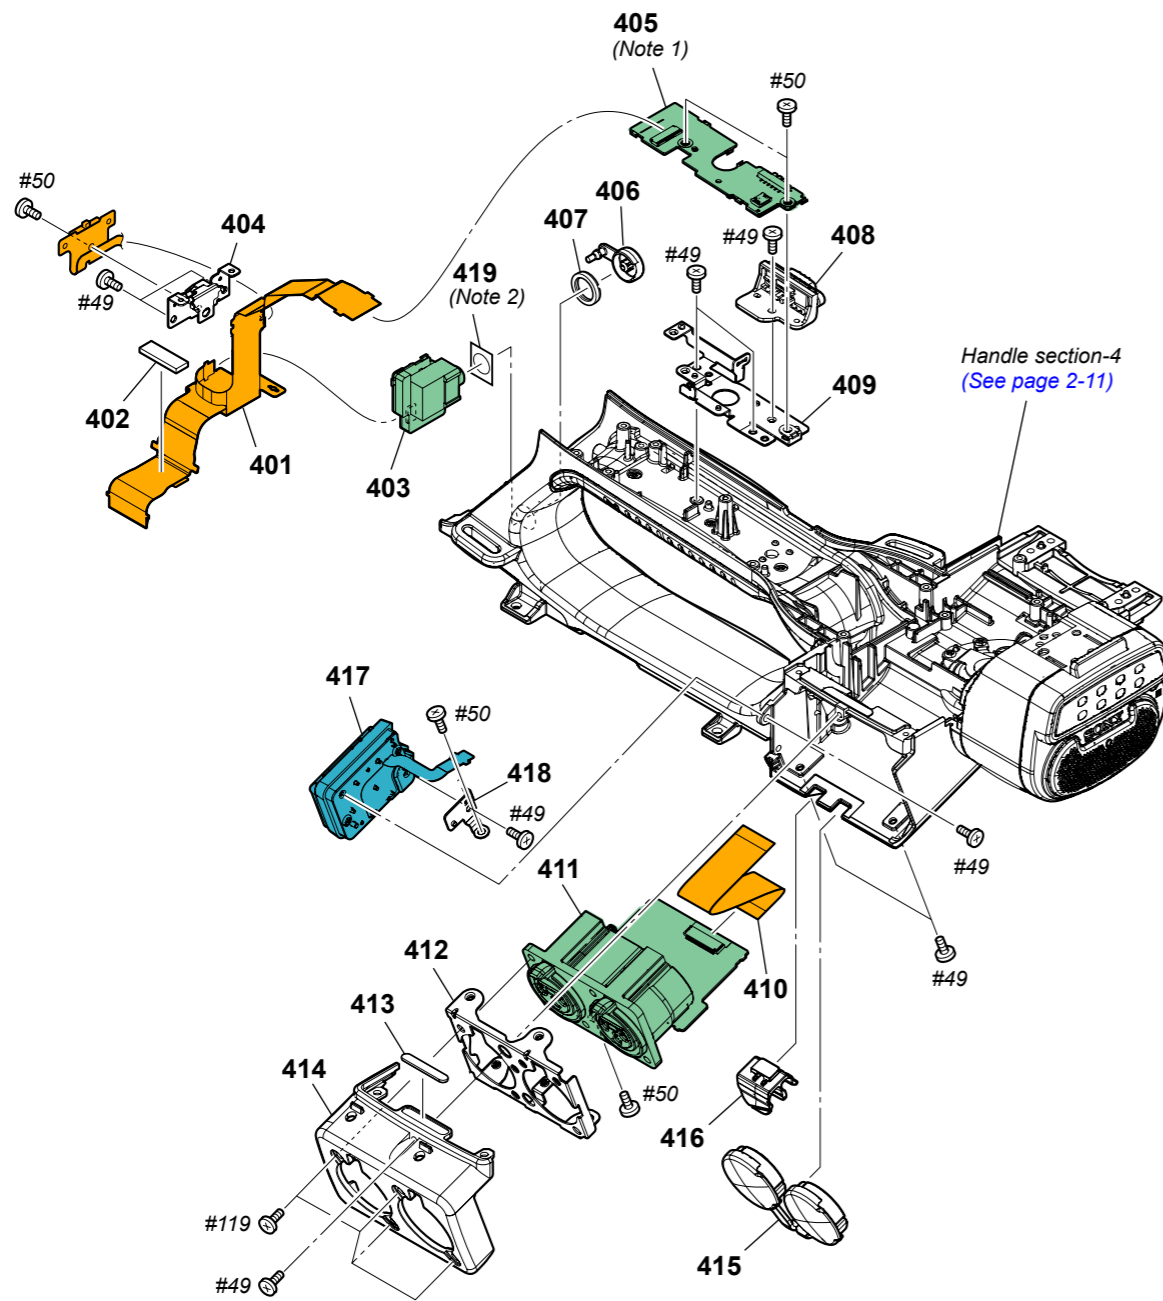

Ref. No.	Part No.	Description
401	A-1994-397-A	FP-2170 FLEXIBLE BOARD, COMPLETE
* 402	4-175-181-01	SHEET (FP1152), WATERPROOF
403	A-1994-395-A	HP-1005 BOARD, COMPLETE
* 404	4-165-280-01	BRACKET, REAR TALLY
405	A-1994-396-A	HG-1002 BOARD, COMPLETE (Note 1)
406	4-165-284-01	COVER, HP JACK
407	3-061-234-01	NUT (M6X0.5)
408	X-2188-599-1	KNOB ASSY, ZOOM SELECTION
* 409	4-165-232-01	BRACKET (GP), HG
410	1-834-244-11	FLEXIBLE FLAT CABLE (FFC-116)

Ref. No.	Part No.	Description
411	A-1994-374-A	XL-1003 BOARD, COMPLETE
412	4-531-779-01	BRACKET (93600), XL
413	3-288-474-01	RUBBER, PANEL RETAINER
414	4-165-282-31	COVER, XLR
415	4-165-285-01	COVER, XLR RUBBER
416	2-892-095-01	CLAMP, CABLE
417	1-480-870-21	SWITCH BLOCK, CONTROL (XS93000)
418	4-165-286-01	HOLDER, XS BLOCK
419	4-476-923-01	SHEET (HP) (Note 2)
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2
#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2
#119	7-627-556-58	SCREW +P 2.6X5

Screw

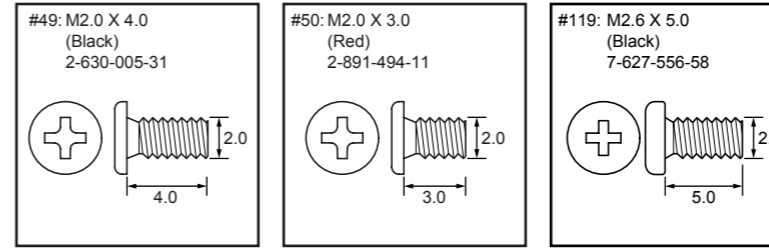

Note


Note 1: Refer to "Assembly-5: On installation of the HG-1002 Board, adjust the position of the switch".

Note 1: 組立時は"Assembly-5: On installation of the HG-1002 Board, adjust the position of the switch"を参照してください。

Note 2: Do not reuse these Parts because their adhesive force decreases when they are removed once.

Note 2: これらの部品は一度剥がすと粘着力が弱くなるため、再利用はしないでください。



2-1-9. HANDLE SECTION-4

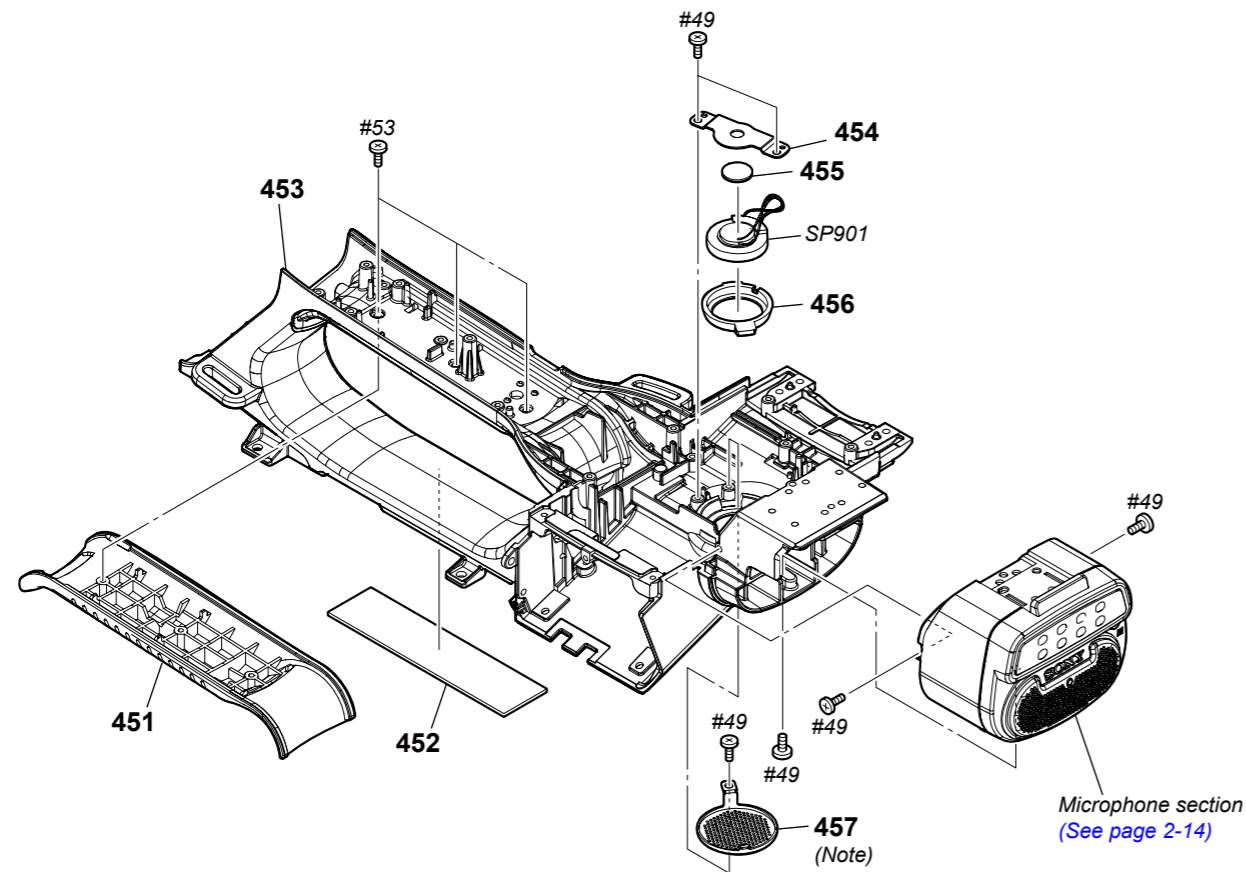

Ref. No.	Part No.	Description
451	4-165-278-01	GRIP
452	4-165-224-01	SHEET (6018T1), RADIATION
453	4-488-866-01	HANDLE
* 454	3-288-526-01	RETAINER, SPEAKER
* 455	4-488-867-01	CUSHION, SPEAKER

Ref. No.	Part No.	Description
456	2-178-550-01	HOLDER, SPEAKER
* 457	2-178-566-01	GRILLE, SPEAKER (Note)
SP901	1-858-075-41	SPEAKER (1.8CM)
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2
#53	3-080-206-21	SCREW, TAPPING, P2

Screw

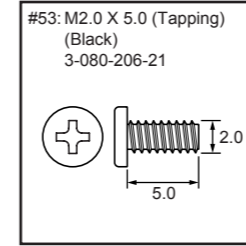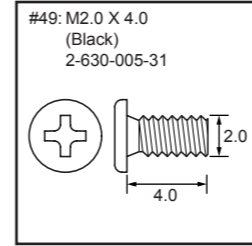


Note

Note: Refer to "Assembly-3: How to bent the Speaker Grille" when installing.

Note: 組立時は"Assembly-3: How to bent the Speaker Grille"を参照してください。

2-1-10. EVF SECTION

ns: not supplied

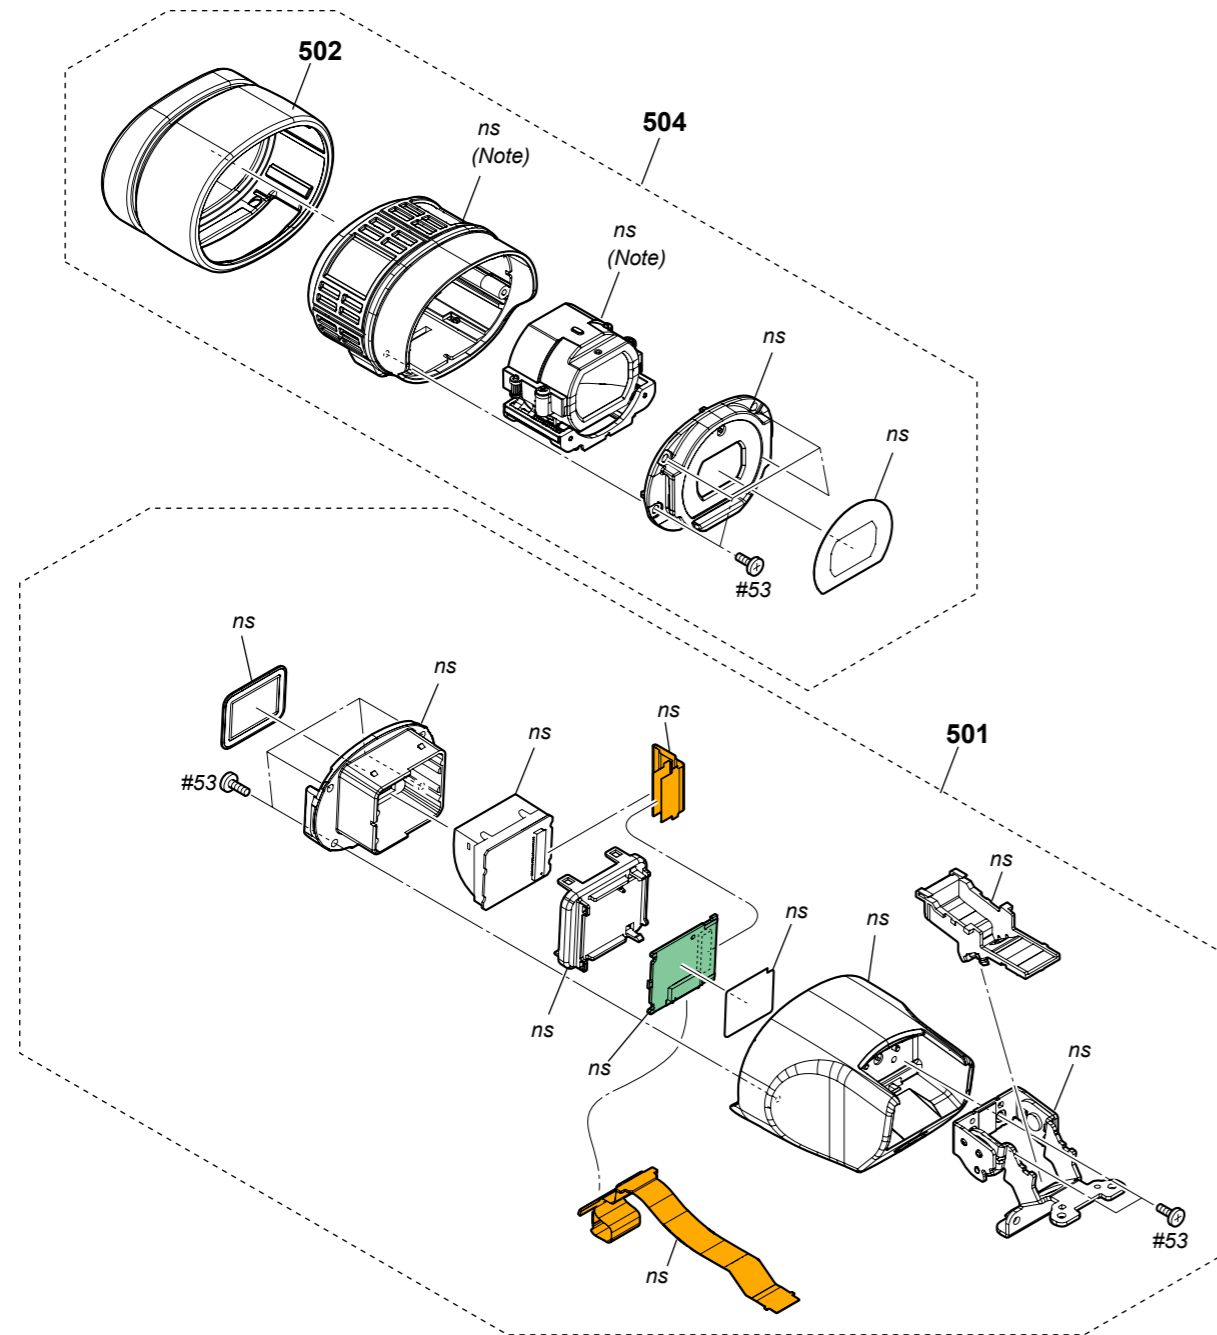


Ref. No.	Part No.	Description
501	A-2033-056-A	EVF BLOCK ASSY (SERVICE)
502	4-119-301-01	EYE CUP (SMALL)
504	A-1981-924-A	EYE CUP (40400) ASSY (SERVICE)
#53	3-080-206-21	SCREW, TAPPING, P2

HXR-NX3

Screw

#53: M2.0 X 5.0 (Tapping)
(Black)
3-080-206-21

 


Note

Note: Refer to "Assembly-1: Confirm the Diopter Adjustment Lever is on the left side when installing the VF Lens Assy" when installing.

Note: 組立時は"Assembly-1: Confirm the Diopter Adjustment Lever is on the left side when installing the VF Lens Assy"を参照してください。

2-1-11. LCD SECTION

ns: not supplied

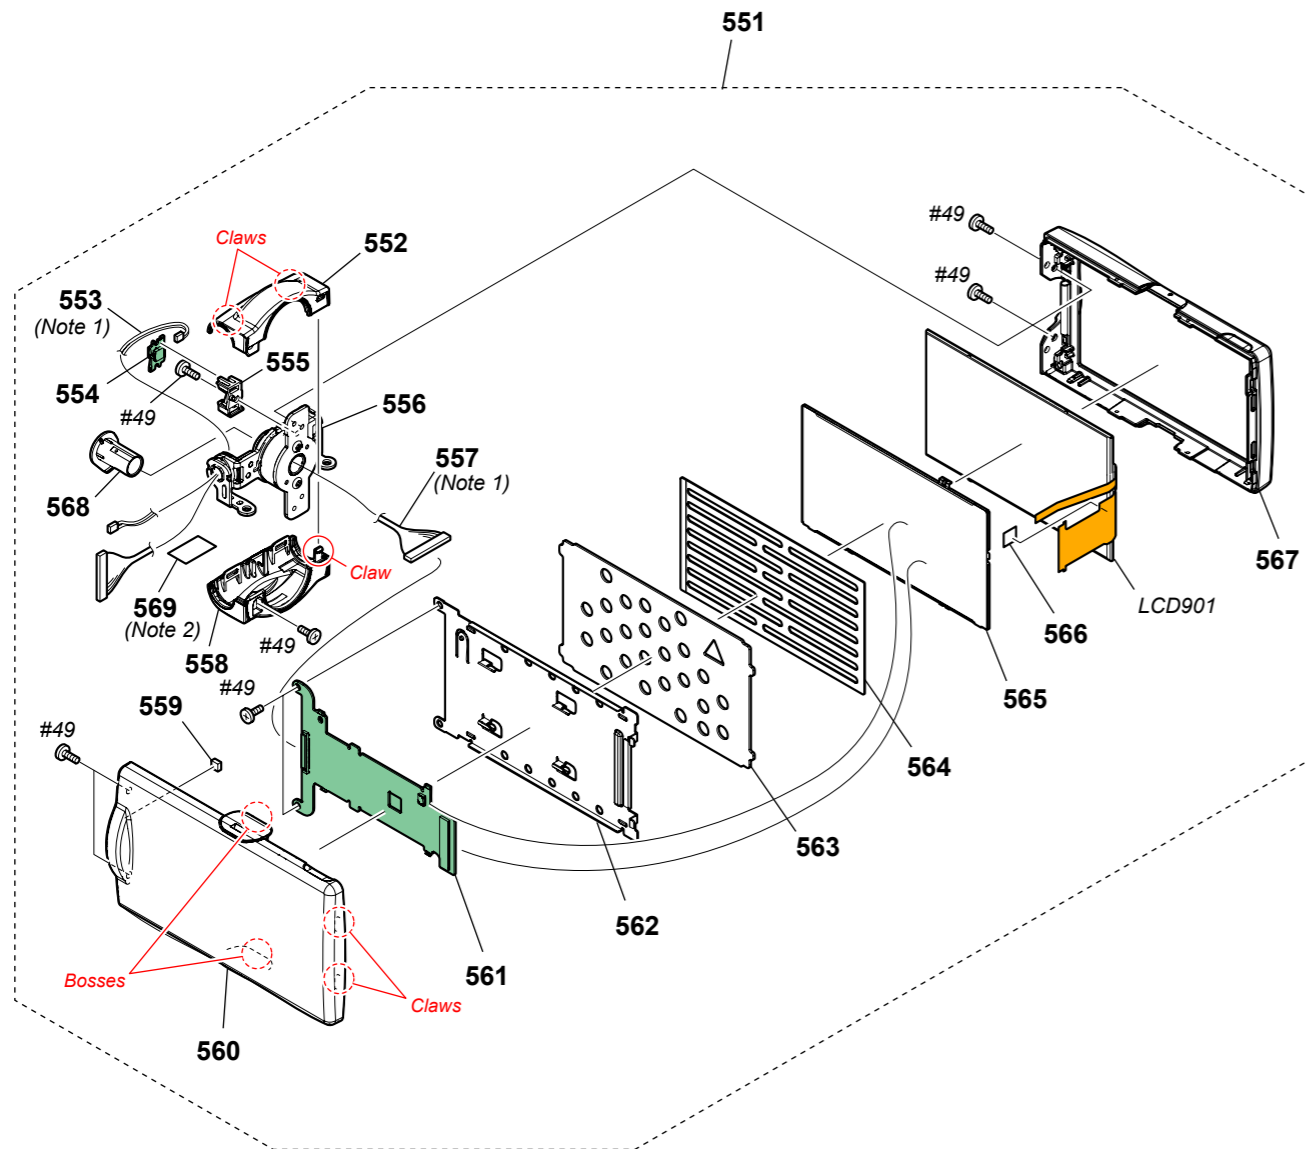


Ref. No.	Part No.	Description
551	A-1990-464-A	PANEL BLOCK ASSY
552	4-460-895-01	COVER (O), HINGE
553	1-963-030-21	HARNESS (SW-116) (Note 1)
554	A-1994-373-A	HT-1002 BOARD, COMPLETE
555	4-460-897-01	HOLDER, HT
556	X-2587-151-2	HINGE (40400) ASSY
557	1-965-937-21	HARNESS (COAXIAL CABLE) (Note 1)
558	4-460-894-01	COVER (U), HINGE
559	1-471-514-11	MAGNET (LM-30FH)
560	4-488-847-01	CABINET (C), P

Ref. No.	Part No.	Description
561	A-1994-372-A	PD-1026 BOARD, COMPLETE
562	4-461-959-01	FRAME, PD
* 563	4-488-846-01	SPACER, LCD
564	4-283-280-11	CUSHION (91000), LCD
565	1-487-270-11	BLOCK, LIGHT GUIDE PLATE (3.5)
566	3-089-986-01	SHEET (L), LIGHT INTERCEPTION
567	X-2588-894-1	CABINET (M) ASSY, P
568	4-460-898-01	GUARD, HARNESS
569	4-475-841-11	SHEET (HN) (Note 2)
LCD901	1-811-403-11	LCD WITH TOUCH PANEL
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2

Screw

#49: M2.0 X 4.0
(Black)
2-630-005-31

 

Note

Note 1: Refer to "Assembly-2: How to arrange Harnesses (SW-116)" when installing.


Note 2: Do not reuse these Parts because their adhesive force decreases when they are removed once.

Note 1: 組立時は"Assembly-2: How to arrange Harnesses (SW-116)"を参照してください。

Note 2: これらの部品は一度剥がすと粘着力が弱くなるため、再利用はしないでください。

2-1-12. MICROPHONE SECTION

ns: not supplied

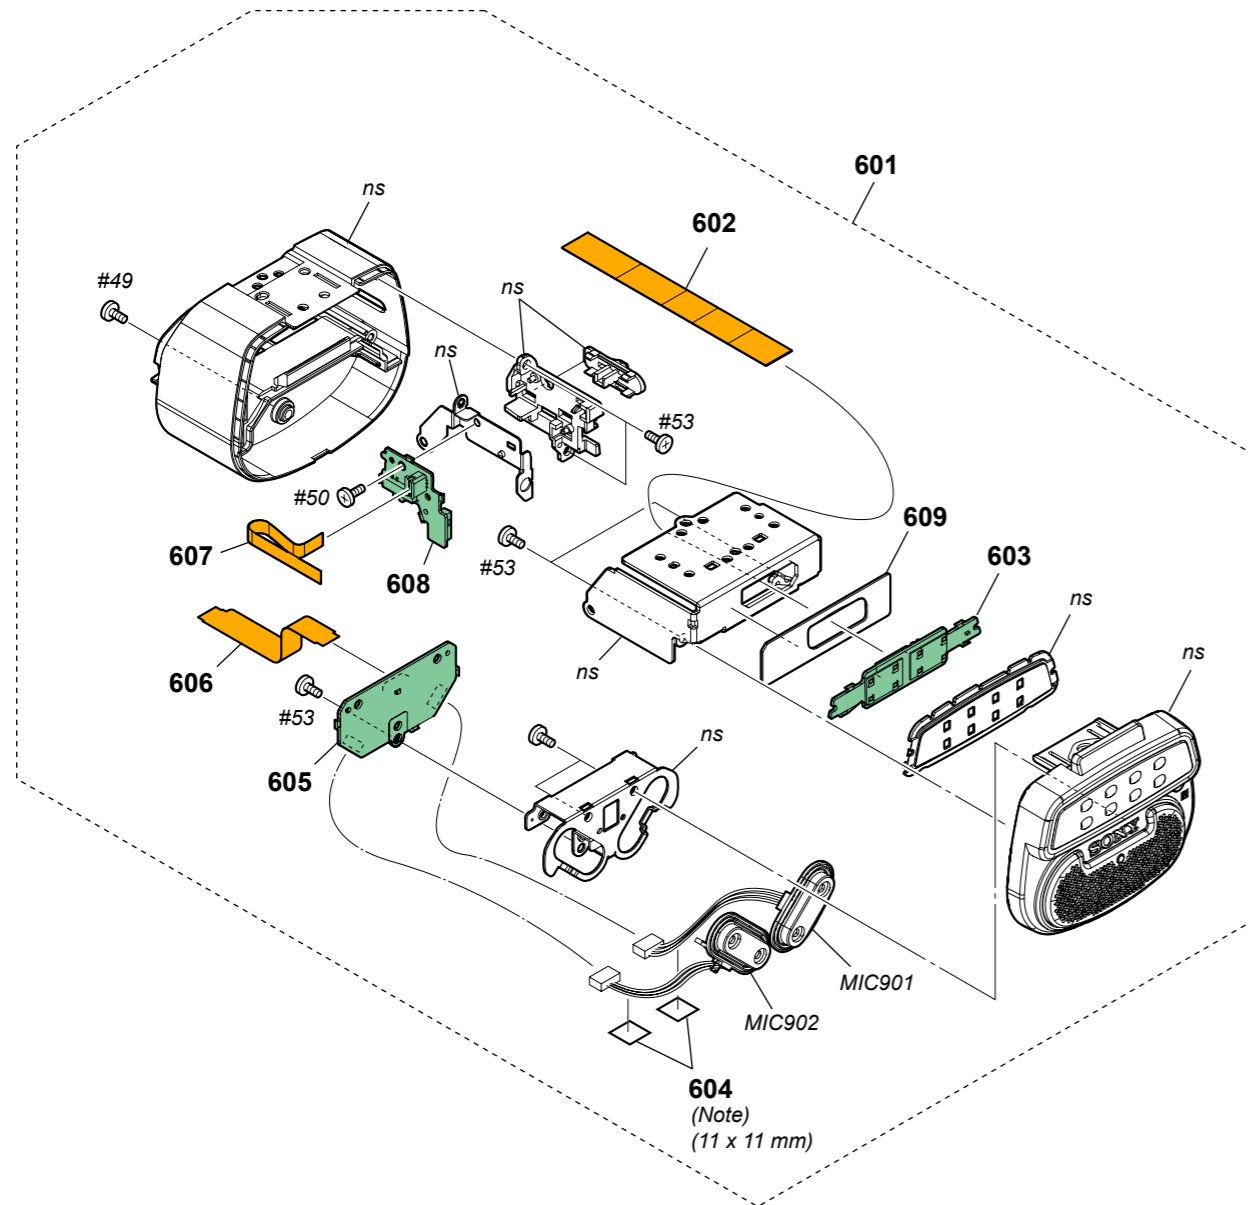


Ref. No.	Part No.	Description
601	A-1990-467-A	MICROPHONE BLOCK ASSY
602	1-846-792-11	FLEXIBLE FLAT CABLE (FFC-1047)
603	A-1994-362-A	VL-1001 BOARD, COMPLETE
604	3-076-631-01	NON WOVEN (T0.25) (Note)
605	A-1994-364-A	MA-1008 BOARD, COMPLETE
606	1-876-946-11	FP-975 FLEXIBLE BOARD
607	1-848-048-11	FLEXIBLE FLAT CABLE (FFC-1059)
608	A-1994-363-A	SW-1011 BOARD, COMPLETE
609	4-488-855-01	SHEET, VL RADIATION

Ref. No.	Part No.	Description
MIC901	1-542-513-21	MICROPHONE
MIC902	1-542-513-21	MICROPHONE
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2
#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2
#53	3-080-206-21	SCREW, TAPPING, P2


HXR-NX3

Screw


#49: M2.0 X 4.0
(Black)
2-630-005-31

 

#50: M2.0 X 3.0
(Red)
2-891-494-11

 

#53: M2.0 X 5.0 (Tapping)
(Black)
3-080-206-21

 


Note

Note: Cut the NON WOVEN (T0.25) (Ref.No.604) for specified size and use it.

Note: NON WOVEN (T0.25) (図面番号604) は、指定の寸法にカットして使用してください。

2-1-13. LENS SECTION

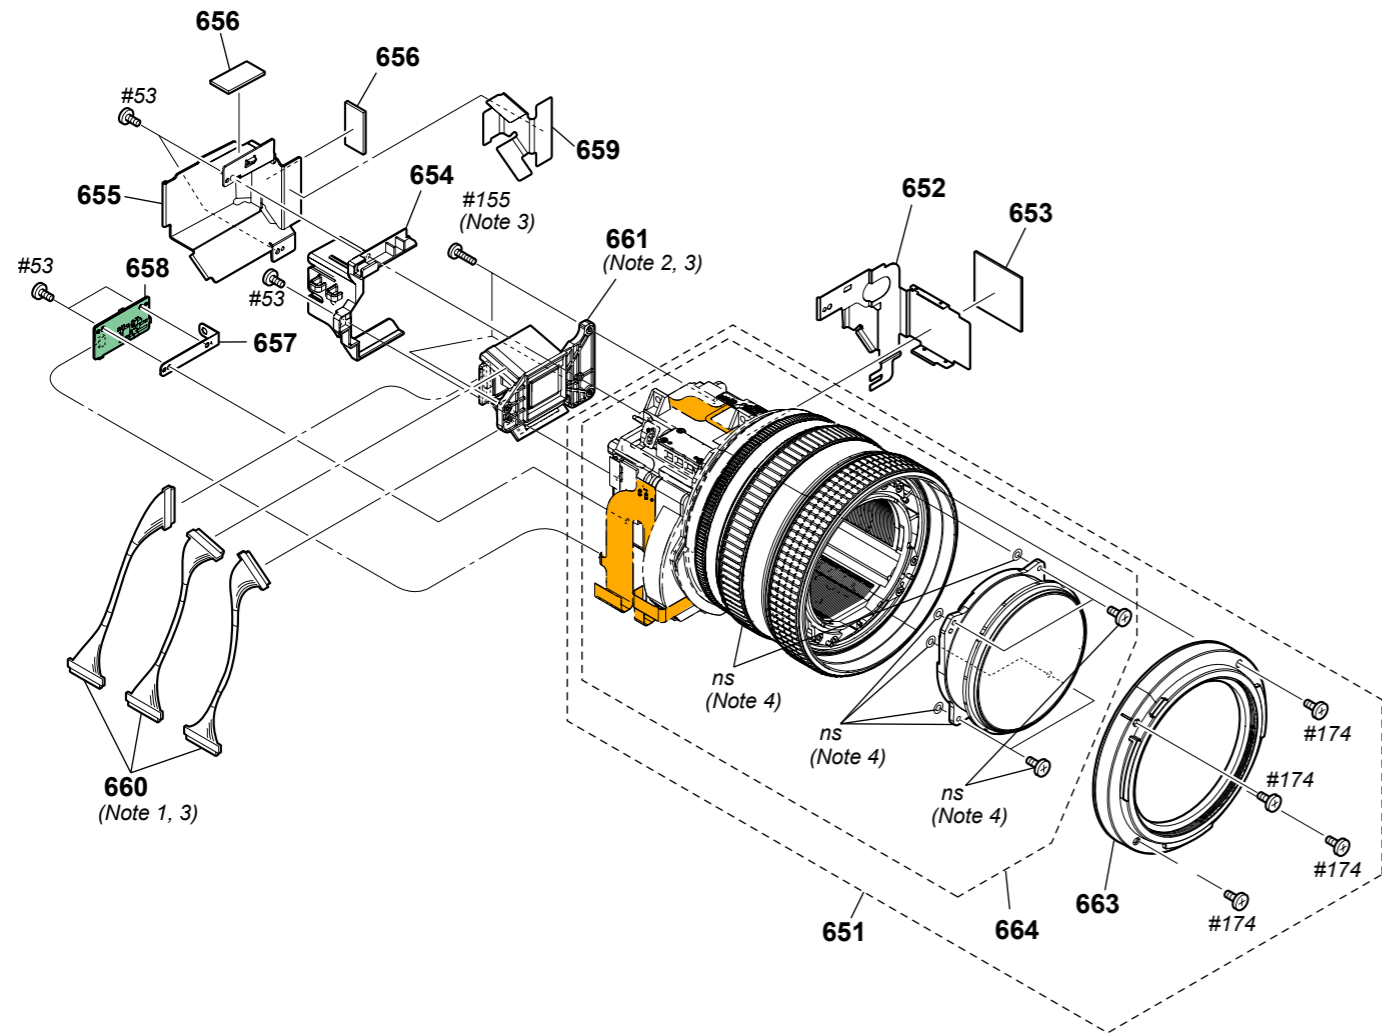


Note 4: If this parts are disassembled, reassemble them correctly.
 • Do not lose the adjustment washer.
 • The adjustment washer may not be used.

Note 4: この部品を分解した場合は、元どおりに組み立て直してください。
 • 調整ワッシャは失くさないように注意してください。
 • 調整ワッシャは使用されていない時もあります。

Ref. No.	Part No.	Description
651	1-788-775-34	LENS, VIDEO CF0022
652	4-488-839-01	HEAT SINK, LENS
653	4-119-362-01	SHEET (2828), LENS RADIATION
* 654	4-488-838-01	CLAMP (IM), HARNESS
* 655	4-488-837-01	HEAT SINK (IM)
656	4-119-356-01	SHEET (1122), LENS RADIATION
* 657	4-119-359-01	PLATE, GY GROUND
658	A-2042-264-A	GY-1004 BOARD, COMPLETE (SERVICE)
659	4-488-840-01	SHEET, CM RADIATION
660	1-970-000-11	HARNESS, COAXIAL (Note 1, 3)


Ref. No.	Part No.	Description
661	A-1989-359-A	DEVICE, PRISM LSV-1620B (Note 2, 3)
663	4-164-788-01	FRAME (SERVICE), FILTER SCREW (WITH GOLD RING)
664	4-285-704-02	RING (SERVICE), MANUAL
#53	3-080-206-21	SCREW, TAPPING, P2
#155	3-080-204-31	SCREW, TAPPING, P2 (Note 3)
#174	3-713-791-35	SCREW (M1.7X5), TAPPING, P2

Screw

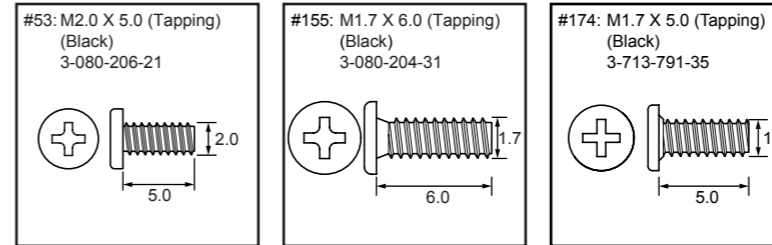


Note

Note 1: Disconnecting the Harness (Coaxial Cable)
 When disconnecting the harness (COAXIAL CABLE), do not pull the harness part but pull off the connector body with tweezers etc.

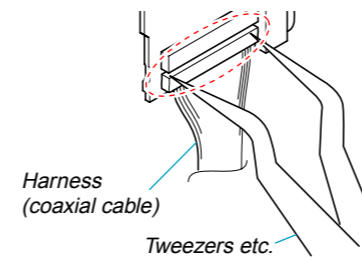

Note 1: ハーネス (同軸ケーブル) の交換について
 ハーネス (同軸ケーブル) を引き抜く際は、ハーネス部を引かず、ピンセット等でコネクタ部を引いてください。

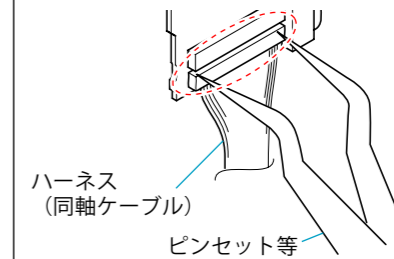


Note 2: Be sure to read "Precautions for Replacement of Imager" on page 6-1 when changing the imager.


Note 2: イメージャの交換時は6-1ページの「イメージャ交換時の注意」を必ずお読みください。

Note 3: Prism Device cautions

Tighten screws in the following order.

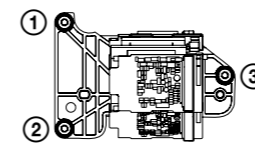


Be sure not to insert the harnesses forcefully.

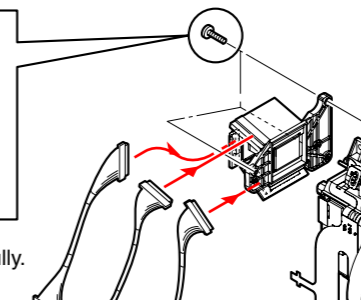


Note 3: プリズムデバイス組立時の注意

下記の順番でねじを締め付けてください。

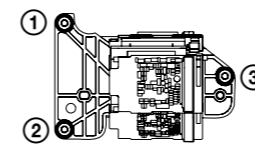


ハーネスを強く差し込まないでください。

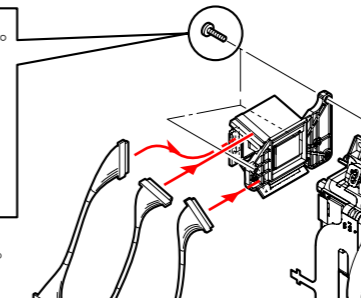

2-1-14. BT PANEL SECTION


ns: not supplied

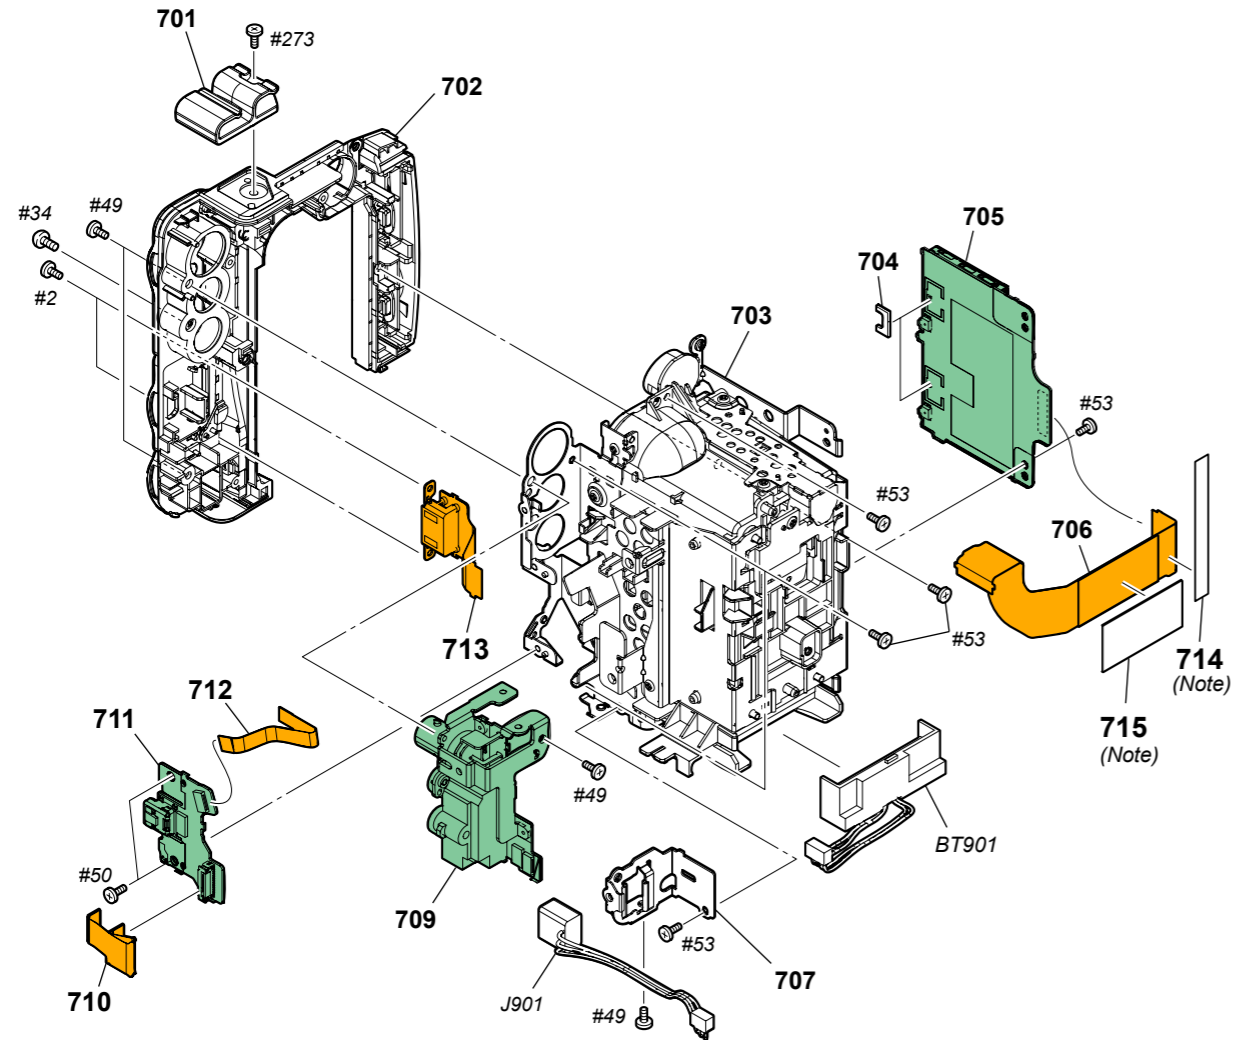

Ref. No.	Part No.	Description
* 701	4-488-856-01	CLAMP, DC CABLE
702	X-2588-895-1	PANEL (93600) ASSY, BT
703	X-2588-896-1	HOLDER ASSY, BT
704	4-165-226-01	SHEET, MS LIGHT INTERCEPTION
705	A-1994-369-A	MS-1019 BOARD, COMPLETE
706	1-889-007-11	FP-2173 FLEXIBLE BOARD
* 707	4-165-378-01	HOLDER, DC
709	A-2015-618-A	CP-1002 BOARD, COMPLETE (SERVICE)
710	1-879-883-11	FP-1162 FLEXIBLE BOARD
711	A-1994-370-A	JK-1008 BOARD, COMPLETE

Ref. No.	Part No.	Description
712	1-837-240-11	FLEXIBLE FLAT CABLE (FFC-194)
713	A-1752-133-A	FP-1149 FLEXIBLE BOARD, COMPLETE
714	4-527-211-01	SHEET (FP2173), COUNTERMEASURE (Note)
715	4-531-811-01	SPACER (FP2173), COUNTERMEASURE (Note)
△ BT901	1-694-411-31	TERMINAL BOARD, BATTERY
△ J901	1-785-247-31	CONNECTOR, DC-IN
#2	2-635-562-31	SCREW (M1.7)
#34	3-077-331-41	+BV3 (3-CR)
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2
#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2
#53	3-080-206-21	SCREW, TAPPING, P2
#273	2-342-356-21	SCREW (M2 (ECO, EG))

Screw

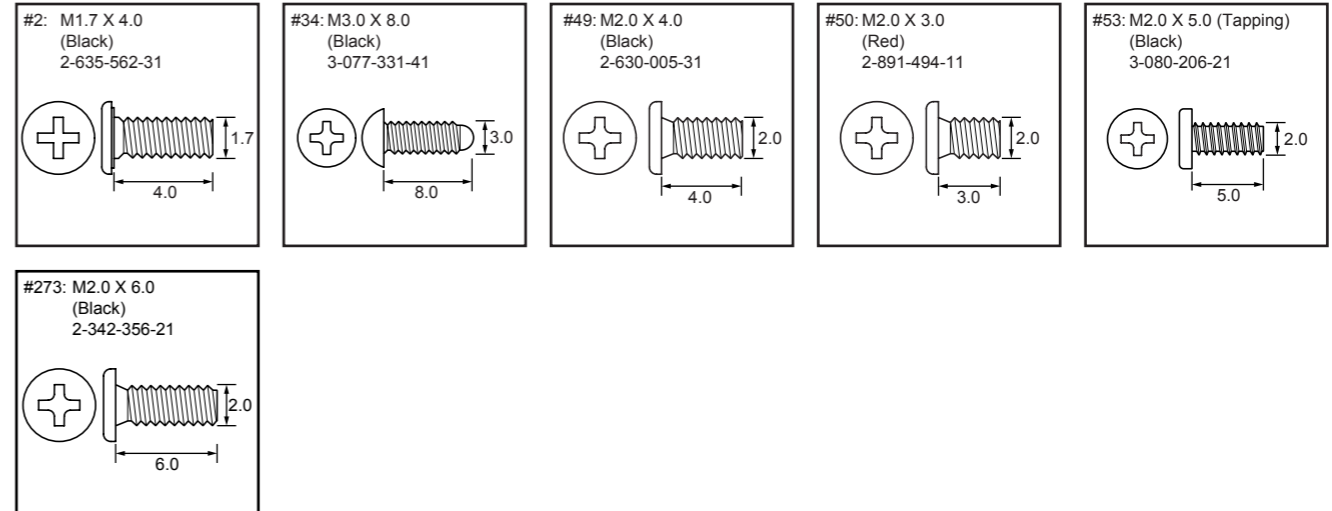


Note

Note: Do not reuse these Parts because their adhesive force decreases when they are removed once.

Note: これらの部品は一度剥がすと粘着力が弱くなるため、再利用はしないでください。

• EXCEPT J MODEL
ACCESSORIES

– ENGLISH –

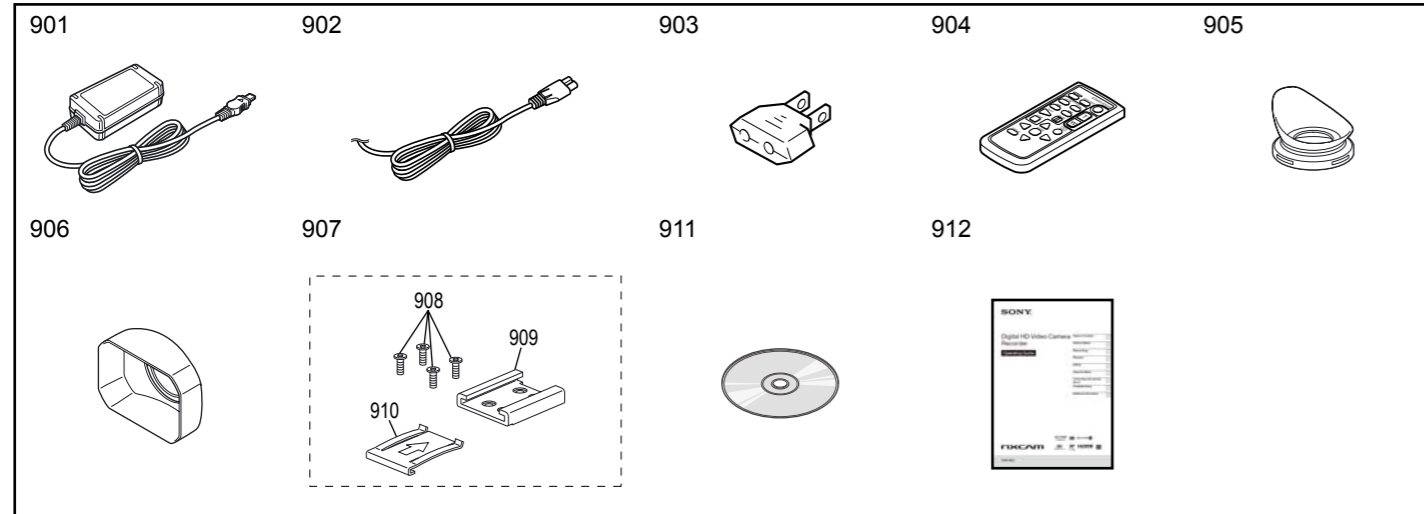


Ref. No.	Part No.	Description
△ 901	1-479-286-61	AC Adaptor (AC-L100C)
△ 902	1-837-426-51	Power cord (mains lead) (AEP, E)
△ 902	1-846-101-51	Power cord (mains lead) (US, CND)
△ 902	1-846-103-42	Power cord (mains lead) (CH)
△ 903	1-569-008-12	Conversion (2P) Adaptor (E: NTSC)
904	1-487-540-13	Wireless Remote Commander (RMT-845)
905	X-2342-702-1	Large eyecup
906	X-2320-850-1	Lens hood with lens cover
907	X-2188-877-2	Accessory shoe kit
908	2-630-005-31	Screw

Ref. No.	Part No.	Description
909	3-069-286-03	Accessory shoe
910	3-288-615-02	Accessory shoe plate
911	4-486-950-02	CD-ROM "Manuals for Digital HD Video Camera Recorder"
* 912	4-477-121-01	Operating Guide (JAPANESE)
* 912	4-477-121-11	Operating Guide (ENGLISH)
* 912	4-477-121-21	Operating Guide (SIMPLIFIED CHINESE)
* 912	4-477-121-31	Operating Guide (FRENCH)
* 912	4-477-121-41	Operating Guide (SPANISH)
* 912	4-477-121-51	Operating Guide (ITALIAN)
* 912	4-477-121-61	Operating Guide (GERMAN)

• J MODEL
付属品

– JAPANESE –

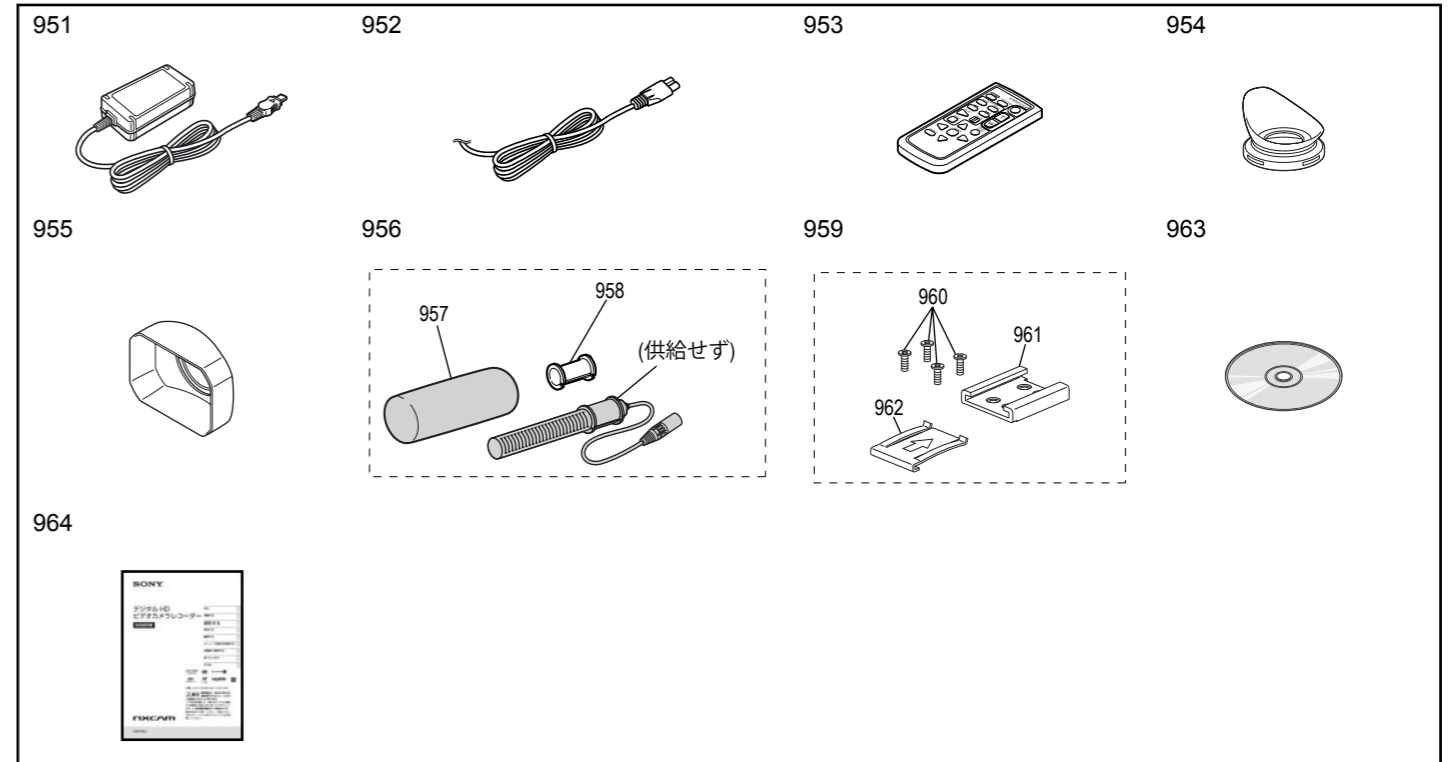

Ref. No.	Part No.	Description
△ 951	1-479-286-61	ACアダプター (AC-L100C)
△ 952	1-836-251-11	電源コード
953	1-487-540-13	ワイヤレスリモコン (RMT-845)
954	X-2342-702-1	大型アイカップ
955	X-2320-850-1	レンズカバー付きフード
956	1-542-749-12	ウインドスクリーン、マイク (ECM-XM1)
957	3-048-481-01	ウインドスクリーン
* 958	3-179-882-01	マイクスペーサー

Ref. No.	Part No.	Description
959	X-2188-877-2	アクセサリーシューキット
960	2-630-005-31	ネジ
961	3-069-286-03	アクセサリーシュー
962	3-288-615-02	シューパネ
963	4-486-950-02	CD-ROM "Manuals for Digital HD Video Camera Recorder"
* 964	4-477-121-01	取扱説明書